



零部件图册

PARTS CATALOG

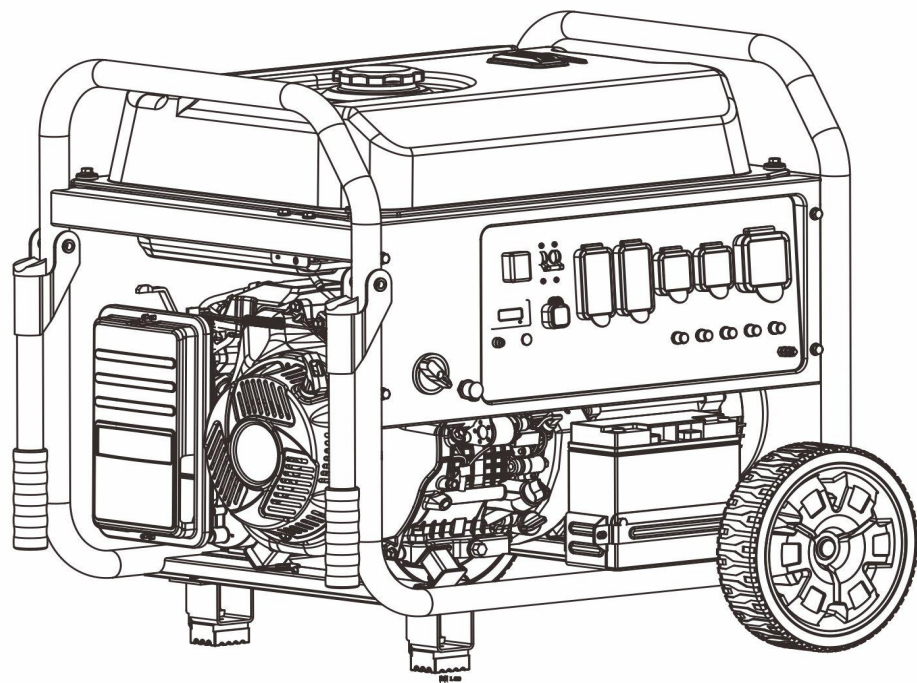


GM12000ED

Inverter Generator

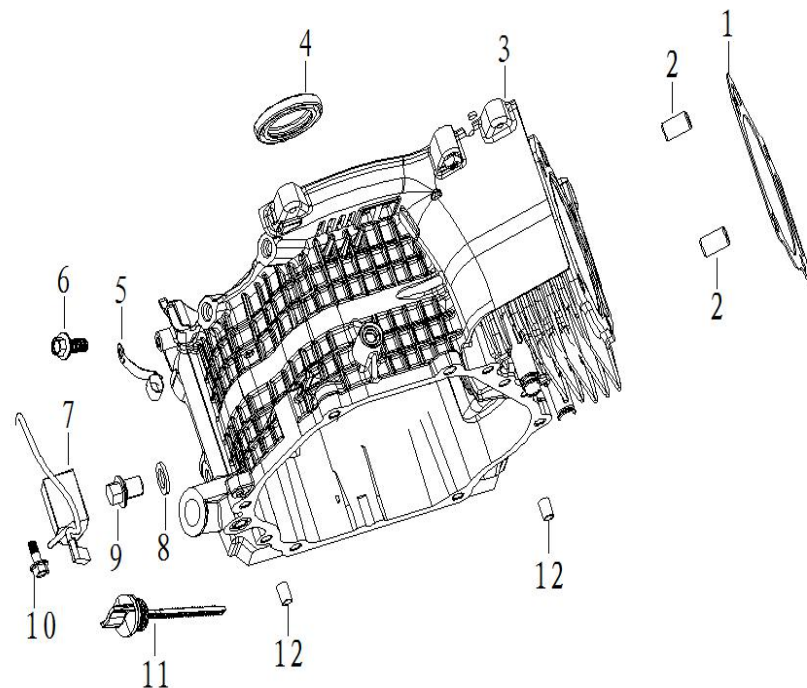


曲轴箱 (Crankcase)

序号	零部件图号	零部件名称	Description	数量
No.	Part No.			Quantity
1	3020. T92. 001V. 00. 00	缸头垫	GASKET, CYLINDER HEAD	1
2	3170. 188. 002V. 00. 00	定位销12×20	SET PIN	2
3	1000. T92. 001V. 00. 00	曲轴箱体	CRANKCASE BODY	2
4	3150. 188. 001V. 00. 00	油封35×52×7	OIL SEAL	1
5	1220. 188. R001V. 00. 00	压线板	PRESSURE LINE BOARD	1
6	5787. 06012. 00. 01	螺栓 (6×12)	BOLT, 6×12	1
7	0135. T92. 003V. 00. 00	机油报警器模块	OIL SENSOR ASS MODULAR	1
8	1260. 188. 001V. 66. 00	放油螺栓垫片 Φ12	WASHER, DRAIN BOLT	1
9	1250. 188. 001V. 00. 20	放油螺栓M12×1.5×15	DRAIN BOLT	1
10	5787. 06012. 00. 01	螺栓 (6×12)	BOLT, 6×12	1
11	1230. T92. 001V. 16. 00	机油尺组件	OIL GAUGE ASS	1
12	3170. 188. 001V. 00. 00	定位销8×12	SET PIN	2
13	3130. T92. 001V. 00. 00	O型密封圈 Φ2.65×Φ11.8	O TYPE SEALING RING	1

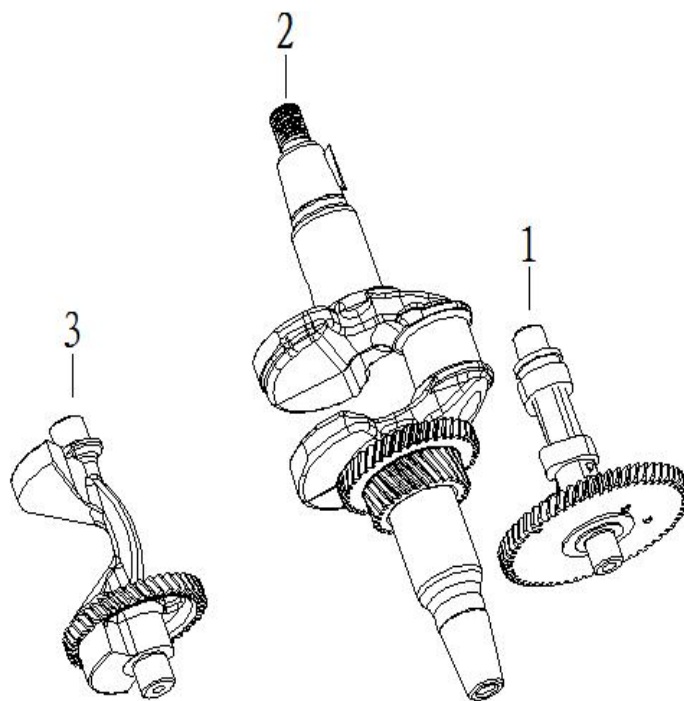


曲轴 (CRANSHAFT PARTS)

序号	零部件图号	零部件名称	Description	数量
No.	Part No.			Quantity
1	1040. T92. 001V. 61. 00	凸轮轴部件	CAMSHAFT ASS	1
2	0180. T92. 002V. 60. 00	曲轴组件	CRANKSHAFT	1
3	1060. T92. 001V. 00. 00	平衡轴	BALANCE SPINDLE	1

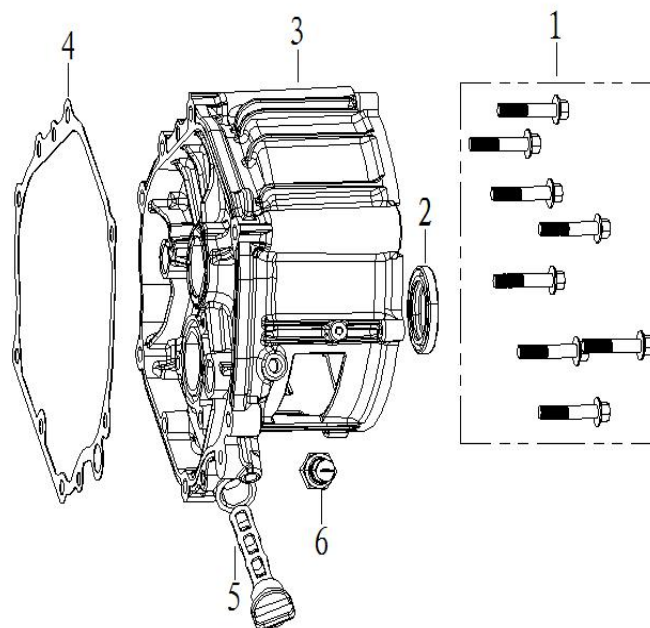


曲轴箱盖 (Crankcase cover)

序号	零部件图号	零部件名称	Description	数量
No.	Part No.			Quantity
1	5787.08042.00.01	螺栓 (8×42)	BOLT, M8×42	7
2	3150.188.001V.00.00	油封35×52×7	OIL SEAL 35×52×7	1
3	1010.T92.001V.00.00	曲轴箱盖	CASE COVER	1
4	3040.T92.001V.00.00	曲轴箱垫	CRANKCASE COVER	1
5	1240.T92.001V.00.00	机油过滤塞	OIL FILTER PLUG	2
6	1020.T92.001V.00.00	压力传感器	PRESSURE TRANSDUCER	1

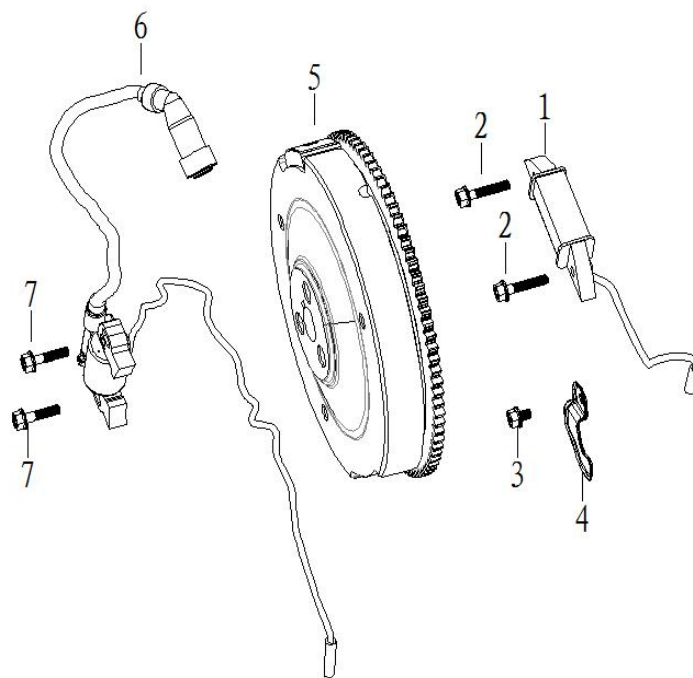


点火系统 (IGNITION SYSTEM)

序号 No.	零部件图号 Part No.	零部件名称	Description	数量 Quantity
1	2050. D88. 001V. 00. 00	充电线圈组件	CHARGE COIL	1
2	5787. 06030. 00. 01	螺栓 (6×30)	BOLT, 6×30	2
3	5787. 06008. 00. 01	螺栓 (6×8)	BOLT, 6×8	1
4	2090. T92. 001V. 00. 00	压板	FIXER, CHARGE COIL	1
5	2040. T92. 004V. 00. 00	飞轮组件	FLYWHEEL	1
6	2100. T92. 0040. 00. 00	点火线圈	IGNITION COIL	1
7	5787. 06025. 00. 01	螺栓 (6×25)	BOLT, 6×25	2

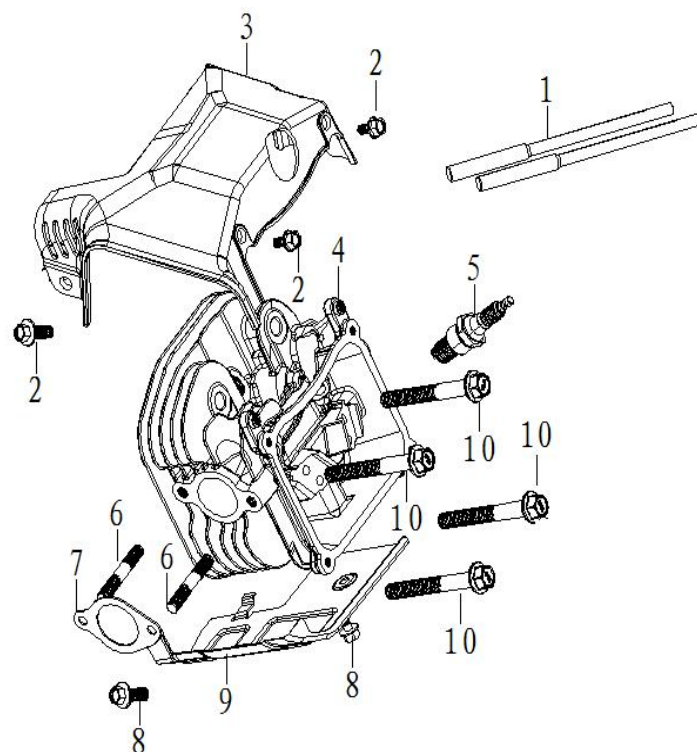


缸头组件 (Cylinder head parts)

序号 No.	零部件图号 Part No.	零部件名称	Description	数量 Quantity
1	0900.68105.00.01	台阶双头螺栓 (6×8×105)	STUD, INTAKE PORT	2
2	5787.06012.00.01	螺栓 (6×12)	BOLT, 6×12	3
3	2230.T92.001V.00.00	上导风罩	UPPER DRAFT HOOD	1
4	0010.T92.001V.00.00	汽缸头	CYLINDER HEAD ASS	1
5	2160.168.0010.00.00	火花塞	SPARK PLUG	1
6	0900.08037.00.01	双头螺栓 (8×37)	STUD, EXHAUST PORT	2
7	3100.T92.001V.00.00	排气密封垫	BAFFLE PLATE	1
8	5787.06008.00.01	带盘螺栓 (6×8)	PLATE BOLT	1
9	2230.T92.002V.00.00	下导风罩	UNDER WIND GUIDE	1
10	M5787.10080.05.01	螺栓 (10×1.25×80)	BOLT, 10X1.25X80	4
11	2180.168.RA18V.00.00	火花塞套筒120MM	Wrench, Spark plug 120MM	1

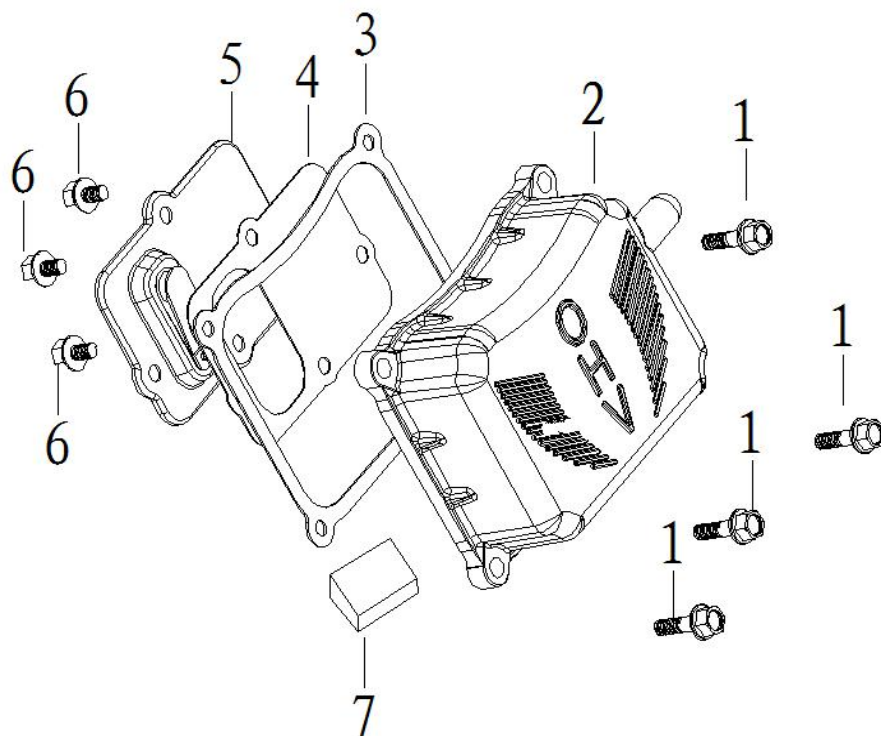


缸头盖 (CYLINDER HEAD)

序号 No.	零部件图号 Part No.	零部件名称	Description	数量 Quantity
1	5787.06020.00.01	螺栓 (6×20)	BOLT, 6X20	4
2	0001.T92.001V.00.00	缸头盖	CYLINDER HEAD COVER	1
3	3000.T92.001V.00.00	缸头盖垫	GASKET, CYLINDER HEAD	1
4	7061.T92.002V.00.00	呼吸阀垫	PACKING, BREATHER CHAMBER	1
5	7061.T92.001V.00.00	呼吸阀组件	CAP, BREATHER CHAMBER	1
6	5789.05010.00.01	十字带盘螺栓 (5×10)	BOLT, FLANGE, 5×10	4
7	7080.T92.001V.00.00	机油滤网 22*19.5*13.5聚酯纤维	OIL STRAINER	1

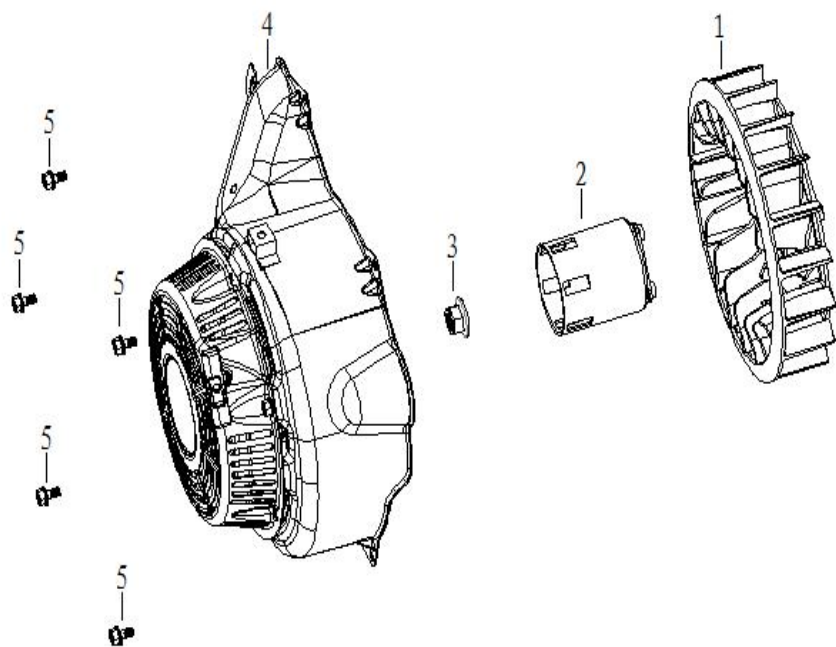


单机起动器 (Engine Starter)

序号	零部件图号	零部件名称	Description	数量
No.	Part No.			Quantity
1	2030. T92. 001V. 63. 00	飞轮风扇	FLYWHEEL FAN	1
2	2020. T92. 001V. 00. 00	起动套	STARTER SLEEVE	1
3	6177. 16000. 06. 01	螺母 (M16×1. 5)	NUT, (M16X1. 5)	1
4	2000. T92. 2710. 04. 02	机组启动器组件	RECOIL STARTER ASS.	1
5	5787. 06012. 00. 01	螺栓 (6×12)	BOLT, 6×12	5

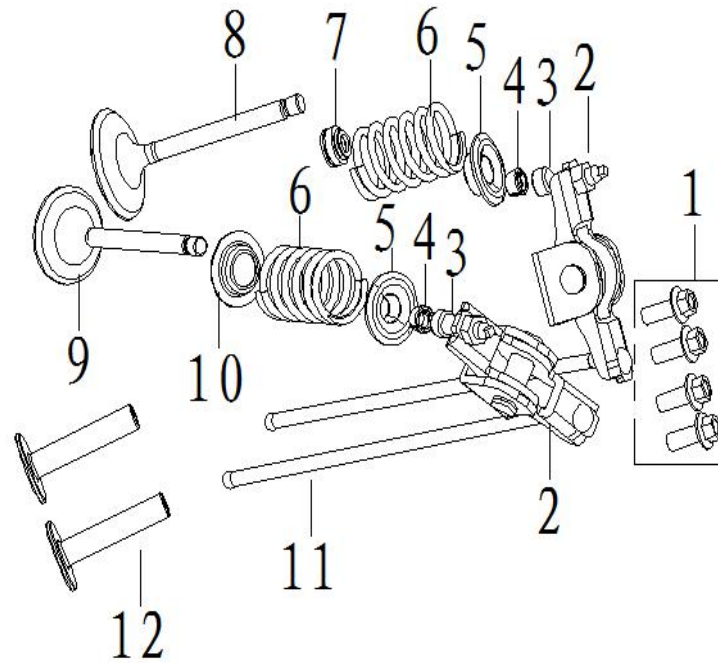


配气 (Air distribution)

序号 No.	零部件图号 Part No.	零部件名称	Description	数量 Quantity
1	5787.06012.00.01	螺栓 (6×12)	BOLT, 6X12	4
2	0100.T92.001V.00.00	摇臂组件	ROCKER ASS	2
3	0090.188.001V.00.00	气门顶帽	CAP, EXHAUST VALVE	2
4	1120.188.001V.00.00	气门锁夹	VALVE COLLET	4
5	0060.T92.001V.00.00	气门弹簧座	RETAINER, VALVE SPRING	2
6	0040.T92.001V.00.00	气门弹簧	SPRING, VALVE	2
7	0085.188.001V.00.00	挡油罩	OIL SEAL, INTAKE VALVE	1
8	0020.T92.001V.00.00	进气门 (盘径Φ39.5)	INTAKE VALVE	1
9	0030.T92.001V.00.00	排气门 (盘径Φ34)	EXHAUST VALVE	2
10	0080.188.001V.00.00	排气门弹簧下座	SPRING UNDER SEAT, EXHAUST VALVE	2
11	0160.T92.002V.00.00	推杆	PUSHER	2
12	1030.188.001V.00.00	挺柱	TAPPET	2

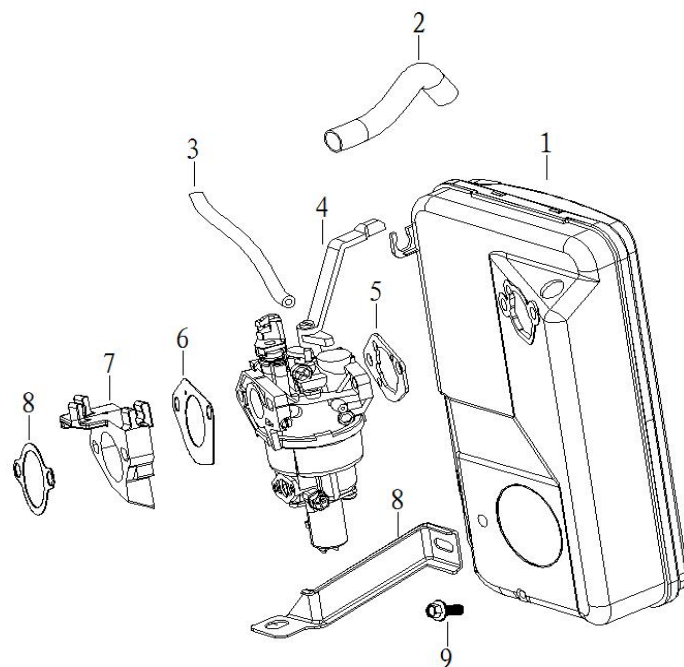


化油器 空滤器 (Carburetor, air filter parts)

序号 No.	零部件图号 Part No.	零部件名称	Description	数量 Quantity
1	2280. T92. C02V. 00. 00	空滤器组件	AIR CLEANER ASS	1
2	2370. T92. 001V. 00. 00	废气管	AIR DUCK	1
3	2330. 188. C130. 00. 22	油管	FUEL TUBE	1
4	2260. T92. 0090. 00. 00	化油器组件	CARBURETOR ASS	1
5	3090. 188. 005V. 00. 00	空滤器钢垫	STEEL GASKET	1
6	3080. T92. 001V. 00. 00	化油器垫片	GASKET, CARBURETOR	1
7	2300. T92. 002V. 00. 00	化油器接块	BLOCK, CARBURETOR	1
8	3060. T92. 001V. 00. 00	进气口垫片	GASKET, INLET PORT	1
9	2290. T92. 001V. 00. 00	机组空滤器支架	SUPPORT, AIRCLEANER	1
10	5787. 06012. 00. 01	螺栓 (6×12)	BOLT	1

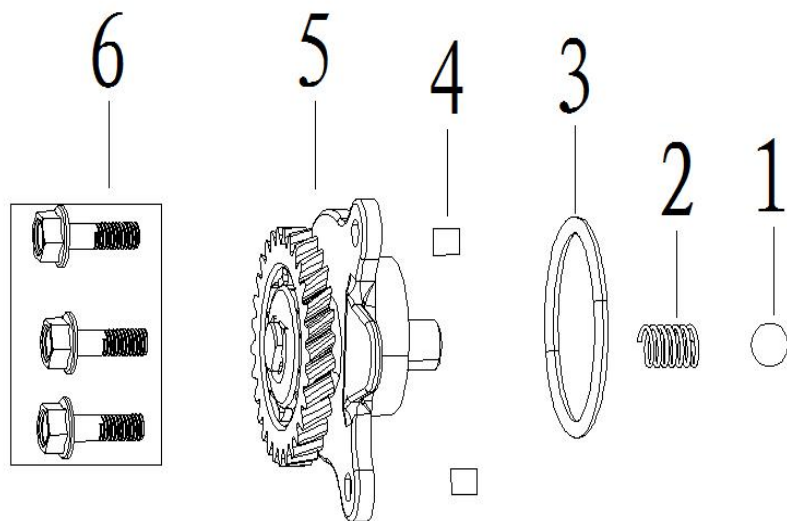


机油泵 (OIL PUMP)

序号	零部件图号	零部件名称	Description	数量
No.	Part No.			Quantity
1	1900.T92.001V.00.00	钢珠Φ9.5	STEEL BALL	1
2	1150.T92.002V.00.00	机油泵阀门弹簧	OIL PUMP VALVE SPRING	1
3	3130.T92.002V.00.00	O型橡胶圈Φ3.55×Φ42.5	MODEL O RUBBER RING	1
4	3170.188.001V.00.00	定位销8X12	SET PIN	2
5	6240.T92.001V.00.00	机油泵组件	OIL PUMP ASSEMBLY	1
6	5787.06020.00.01	螺栓(6×20)	BOLT, M6×20	3

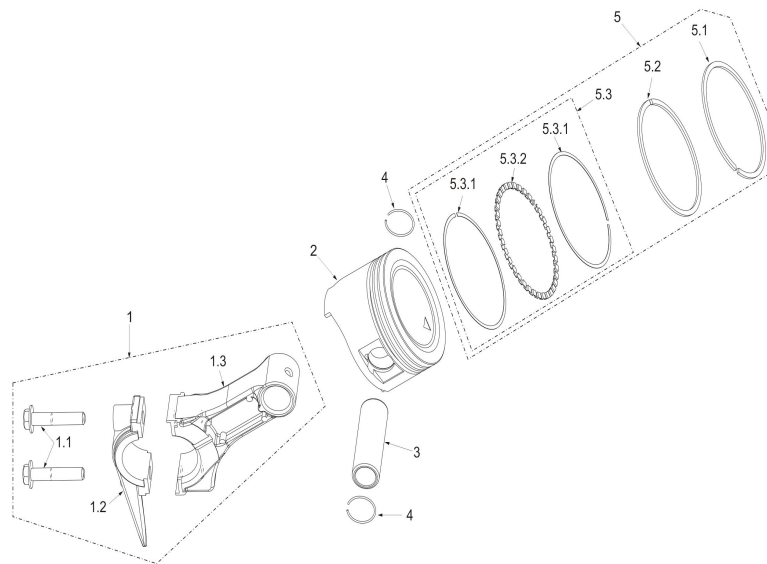


曲轴/活塞 (CRANKSHAFT/PISTON)

序号	零部件图号	零部件名称	Description	数量
No.	Part No.			Quantity
1	0190.T92.001V.00.00	连杆组件	Connecting rod ass.	1
1.1	0190.T92.001V.00.01	连杆螺栓	Bolt,Connecting rod	2
1.2	0190.T92.001V.00.02	连杆盖	Cover ,Connecting rod	1
1.3	0190.T92.001V.00.03	连杆体	Body,Connecting rod	1
2	0200.T92.001V.00.00	活塞	Piston	1
3	0220.T92.001V.00.00	活塞销	Piston pin	1
4	0230.188.001V.00.00	活塞销卡圈	Clip,Piston pin	2
5	0210.T92.001V.00.00	活塞环组件	Piston ring ass.	1
5.1	0210.T92.001V.00.01	第一气环	First air ring	1
5.2	0210.T92.001V.00.02	第二气环	Second air ring	1
5.3	0210.T92.001V.00.03	油环组件	Oil ring ass	1
5.3.1	0210.T92.001V.00.04	刮油环	Scraper ring	2
5.3.2	0210.T92.001V.00.05	衬环	Set off ring	1

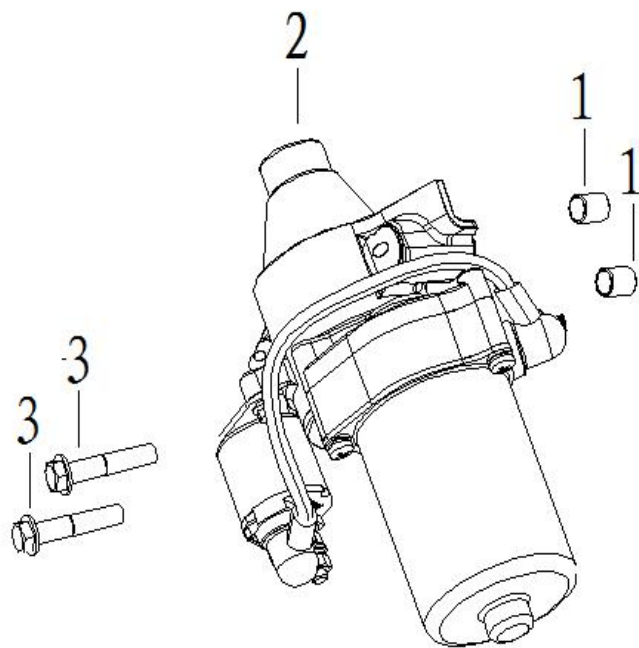


启动电机 (STARTING MOTOR)

序号	零部件图号	零部件名称	Description	数量
No.	Part No.			Quantity
1	3170. T92. R001V. 00. 00	定位销 $\Phi 8 \times 10$	SET PIN	2
2	2070. T92. A01V. 00. 00	起动电机	STARTING MOTOR PARTS	1
3	5787. 08050. 00. 01	螺栓 8×50	BOLT, 8×50	2

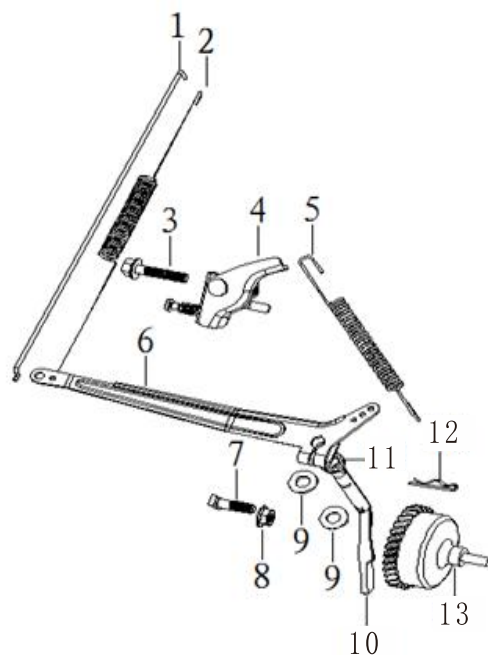


调速架部件 (SPEED ADJUSTMENT BASE PARTS)

序号 No.	零部件图号 Part No.	零部件名称	Description	数量 Quantity
1	1140. T92. 001V. 00. 00	拉杆	PULLING ROD	1
2	1160. T92. 001V. 00. 00	微调速弹簧	FINE DAJUSTMENT SPRING	1
3	5787. 06030. 00. 01	螺栓 (6×30)	BOLT6×30	1
4	1180. T92. 001V. 00. 00	调速器座部件	SPEED ADJUSTMENT BASE ASS.	1
5	1150. T92. 003V. 00. 00	复位弹簧	RETURN SPRING	1
6	1130. T92. A01V. 00. 00	调速臂	SPEED ADJUSTMENT ARM	1
7	1170. 168. 001V. 00. 20	T型调速臂连接螺栓 M6×21	QUADRATEBOLT	1
8	6177. 06000. 00. 01	螺母 (M6)	NUT	1
9	1110. 188. 001V. 67. 00	垫片 Φ8.5×Φ17×1.0	WASHER, SWAY BAR	2
10	1100. T92. 001V. 00. 00	调速摆杆	ROD, GOVERNOR	1
11	3150. 188. 003V. 00. 00	摆杆油封8×14×4	OIL SEAL, SWAY BAR	1
12	1120. 188. 001V. 00. 00	调速摆杆锁夹	SPLIT CLIP	1
13	1070. T92. 001V. 00. 00	调速齿轮组件	CENTRIFUGAL GEAR ASS	1

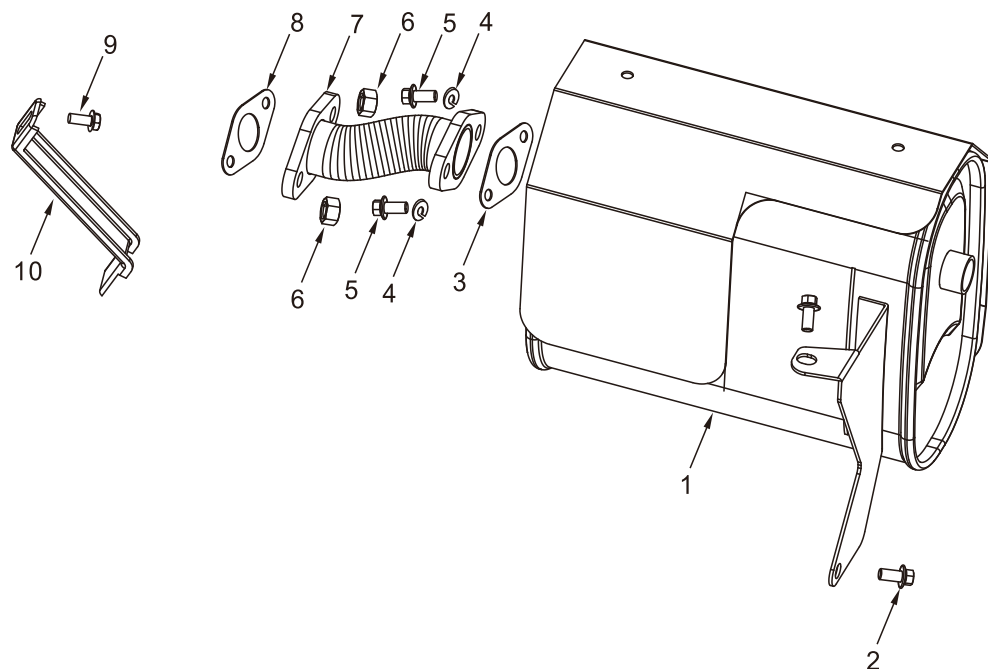


消声器 (Muffler parts)

序号	零部件图号	零部件名称	Description	数量
No.	Part No.			Quantity
1	2400.560.0230.00.00	消声器组件	Muffler ass.	1
2	5787.08016.00.01	螺栓 M8×16	Bolt	1
3	3100.188.006V.00.00	消声器垫片	Gasket, Muffler	1
4	7244.08000.00.03	弹垫圈	Spring washer	2
5	5787.08025.00.01	螺栓 M8×25	Bolt	2
6	6170.08000.00.01	六角螺母M8	Nut	2
7	2410.520.0110.00.00	排气管	Exhaust pipe	1
8	3100.T92.001V.00.00	进气口垫片	Intake gasket	1
9	5787.06012.00.01	螺栓 M6×12	Bolt	1
10	2290.T92.001V.00.00	空滤器支架	Air filter holder	1

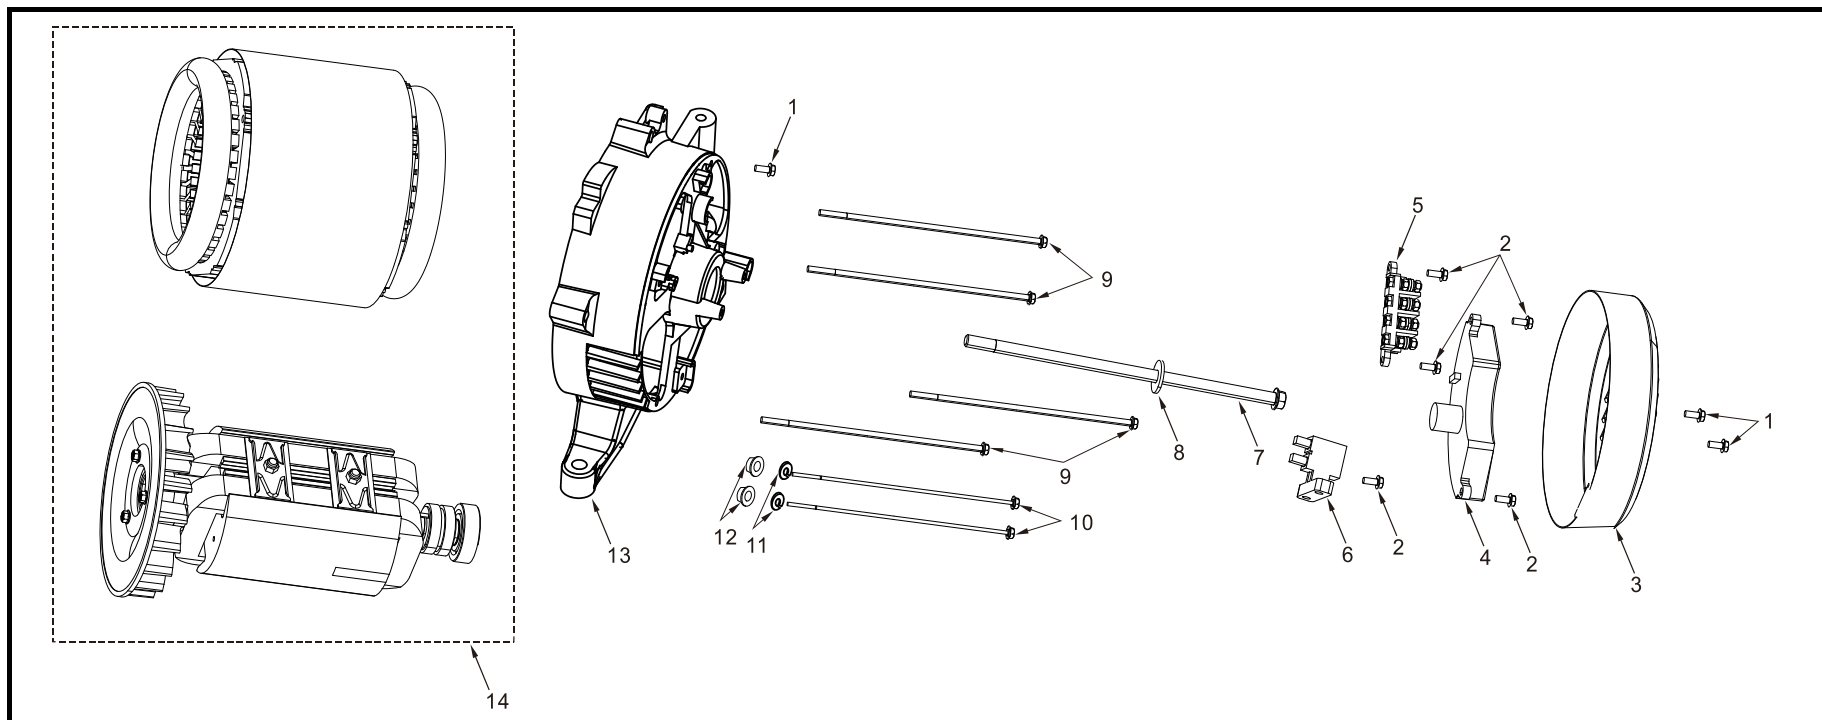

电机部件 (STATOR & ROTOR PARTS)


序号 No.	零部件图号 Part No.	零部件名称	Description	数量 Quantity
1	5789.05010.00.01	螺栓 M5×10	Bolt M5×10	3
2	5789.05018.00.01	螺栓 M5×18	Bolt M5×18	5
3	4060.520.001V.D7.00	电机端盖	Bottom cover, Stator & Rotor	1
4	4020.560.008V.00.00	调压器组件	AVR ass.	1
5		接线板组件	Connecting block ass.	1
6		电刷组件	Brush ass.	1
7	0021.10283.05.01	螺栓	Bolt	1
8	4100.520.003V.20.00	平垫	Washer	1
9	5789.06195.04.01	螺栓 M6×195	Bolt	4
10	5783.05235.04.01	螺栓 M5×234	Bolt	2
11	0093.05000.00.03	弹垫 Φ5	Spring washer Φ5	2
12	0889.05000.00.01	自锁螺母 M5	Caulking nut	2
13	4010.520.001V.00.00	支架	Support, Stator & Rotor	1
14	4000.560.4180.00.00	电机组件	Stator & Roter ass.	1

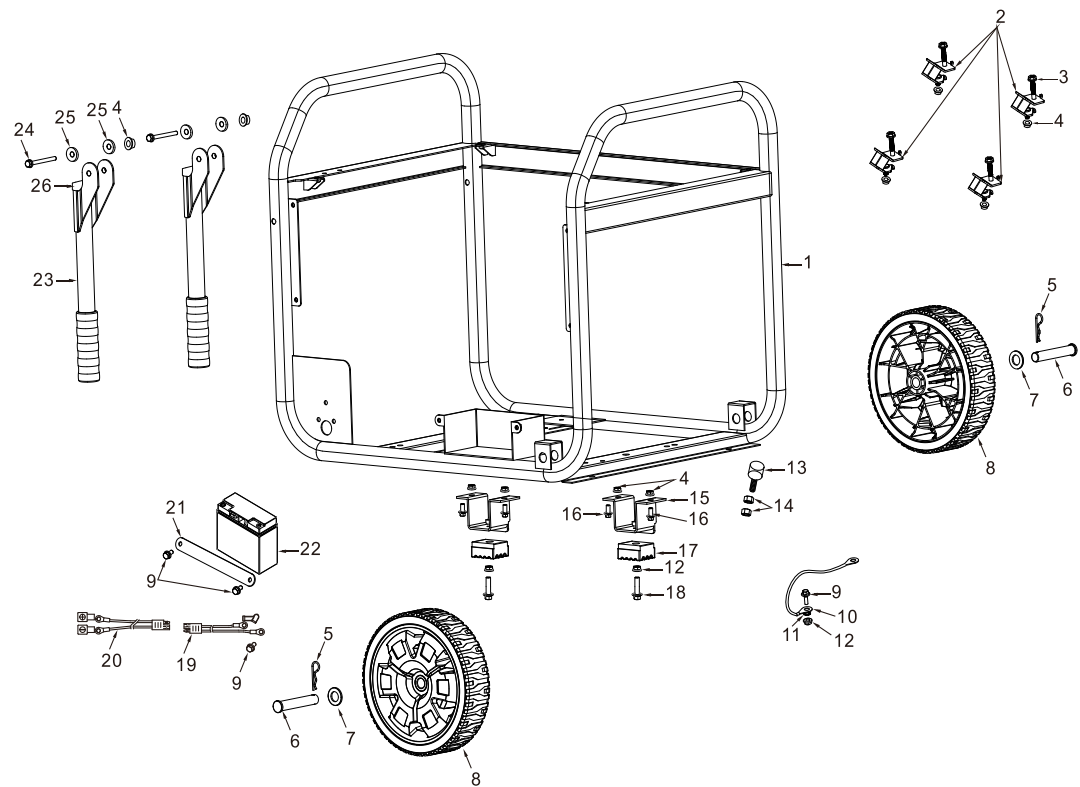

机架 (Frame)


序号	零部件图号	零部件名称	Description	数量
No.	Part No.			Quantity
1	3331.560.8011.D7.00	机架部件	Frame components	1
2	3350.520.003V.00.01	减震座A	Shock absorbing seat A	4
3	6177.10000.05.01	带盘防松螺母M10×1.25	Locking nut with disc	4
4	6177.08000.00.01	带盘防松螺母M8	Locking nut with disc	6
5	7341.855.001V.21.00	R销	R-type bolt	2
6	2997.560.8010.00.00	轮轴	Wheel axle	2
7	4100.520.004V.00.00	非标平垫16.5*30*2	Non-standard flat pad	2
8	3332.572.002V.00.00	轮子	Front wheel	2
9	5787.06012.00.01	带盘螺栓M6×12	Bolt	4

10	3410.520.004V.00.00	电机支架与机架连接线	Connecting line	1
11	8621.06000.00.01	外齿垫圈	External tooth washers	1
12	6177.16000.06.01	带盘螺母M16×1.5	Bolt	3
13	3365.520.001V.00.00	电机支架支撑座	Motor bracket support seat	1
14	6177.10000.06.01	带盘防松螺母M10×1.5	Bolt	2
15	3146.520.8020.D7.00	支架	Holder	2
16	5787.08016.00.01	带盘螺栓M8×16	Bolt	4
17	3360.460.002V.00.00	减震垫	Shock pad	2
18	5787.06025.22.01	带盘螺栓M6×25	Bolt	2
19	6951.560.8020.00.00	电瓶线	Battery cable	1
20	6951.560.8010.00.00	电瓶线	Battery cable	
21	3330.520.122V.D7.11	电瓶压板	Pressing plate	1
22	2460.522.017V.00.00	电瓶	Storage battery	1
23	4821.520.8010.D7.00	扶手组件	Handle plug	2
24	5787.08050.00.01	带盘螺栓M8×50	Bolt	2
25	0185.460.001V.00.00	垫片	Gasket	4
26	5010.520.8010.00.00	手把堵头	Hand plug	2

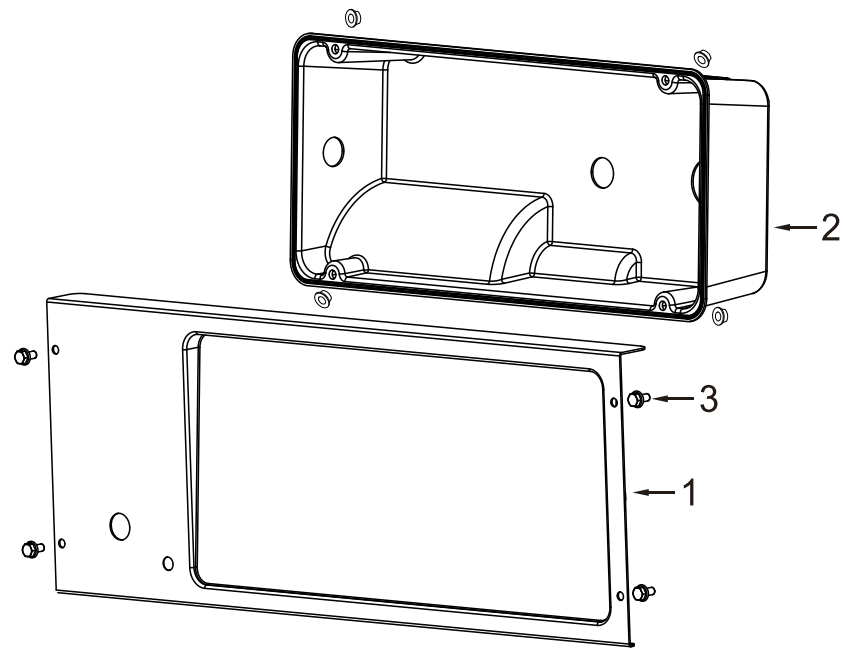

面板 (Panel)

序号	零部件图号	零部件名称	Description	数量
No.	Part No.			Quantity
1	3370.560.8010.D7.99	控制面板组合	Control panel combination	1
2		面板后罩壳	Panel rear cover	1
3	5787.06012.00.01	带盘螺栓M6×12	Bolt	4

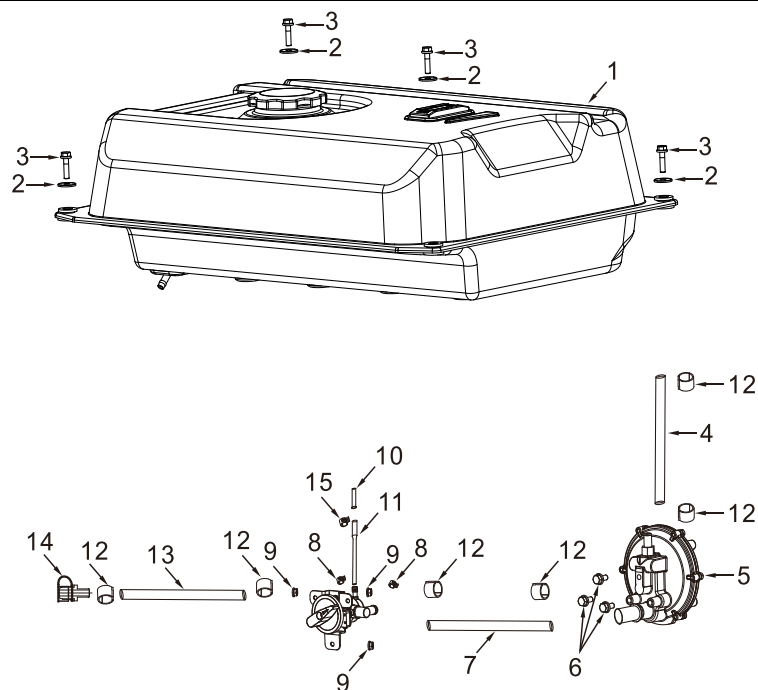

燃油箱部件 (Fuel tank components)

序号	零部件图号	零部件名称	Description	数量
No.	Part No.			Quantity
1	3200.520.8010.P7.00	油箱	Tank	1
2	4100.460.R001V.20.00	非标平垫 $\Phi 6 \times \Phi 25 \times 1.5$	Non standard flat pad	4
3	5787.06025.00.01	带盘螺栓 $M6 \times 25$	Bolt	4
4	3696.560.0020.00.00	燃气连接管 $\Phi 10 \times \Phi 17$ 长420mm	Gas connection	1
5	6659.560.8020.00.00	二级减压阀	Two stage pressure reducing valve	1
6	5787.06012.00.01	带盘螺栓 $M6 \times 12$	Bolt	3
7	3696.560.0060.00.00	燃气连接管 $\Phi 10 \times \Phi 17$ 长280mm	Gas connection	1
8	2360.458.003V.00.00	带形油管夹 $\Phi 8$	Tubing clamps	2
10	3208.P70.001V.00.00	过滤嘴	Filter tip	1
11	2330.188.C130.00.21	油管	Oil tube	1
12	2360.560.0010.00.00	抱箍	Hoop	5
13	3696.560.0050.00.00	燃气连接管 $\Phi 10 \times \Phi 17$ 长240mm	Gas connection	1
14	6658.560.8010.00.00	燃气接头	Gas joint	1
15	2360.458.005V.00.00	带形油管夹 $\Phi 9$	Tubing clamps	1