


# GM6000iED Battery connection and Charging

**2022.7.11**

# 一、拆电瓶护门 Open Battery door

- 拆开电瓶护门 open the battery door

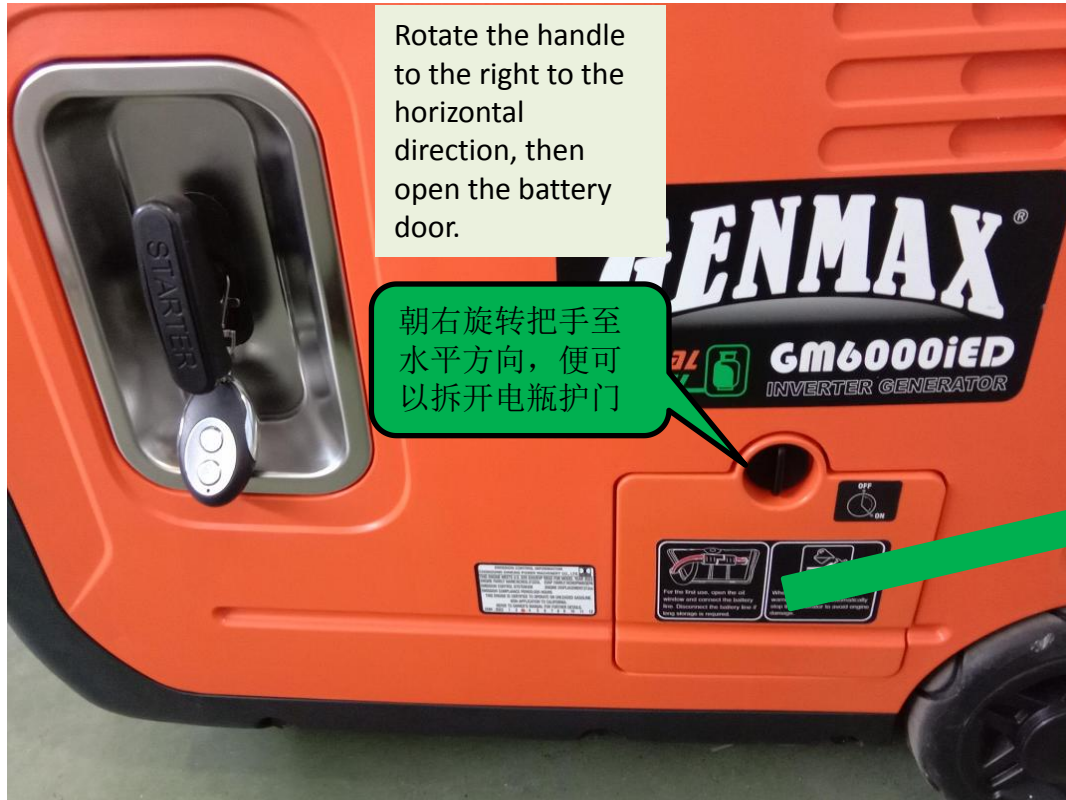

## 二、对接电瓶线 Docking battery line

- 对接电瓶线 Docking battery line



将电瓶线对插，  
接好，放置到型  
腔内。

Insert the battery  
wire pair and place  
it back to the mold

# 三、装配电瓶护门 Assemble the battery door

- 装配电瓶护门 Assemble the battery door



旋转手柄，锁好  
电瓶护门。

Rotate the handle and lock the  
battery door.

# 四、手启动发电机 Start the engine manually

- 手启动机器 Start the machine manually



# 五、启动-CO报警器自检

Start the CO alarm Self-checking



1. 连接气罐气管  
或外接气源气管

connect the  
LPG tank's  
pipe or  
external LPG  
source's pipe

2. 开关调至燃  
气档


Turn the  
switch  
into LPG

3. 开关按至“ON”

Turn the  
switch  
into “ON”

4. 按下一键启动

press the  
START  
button

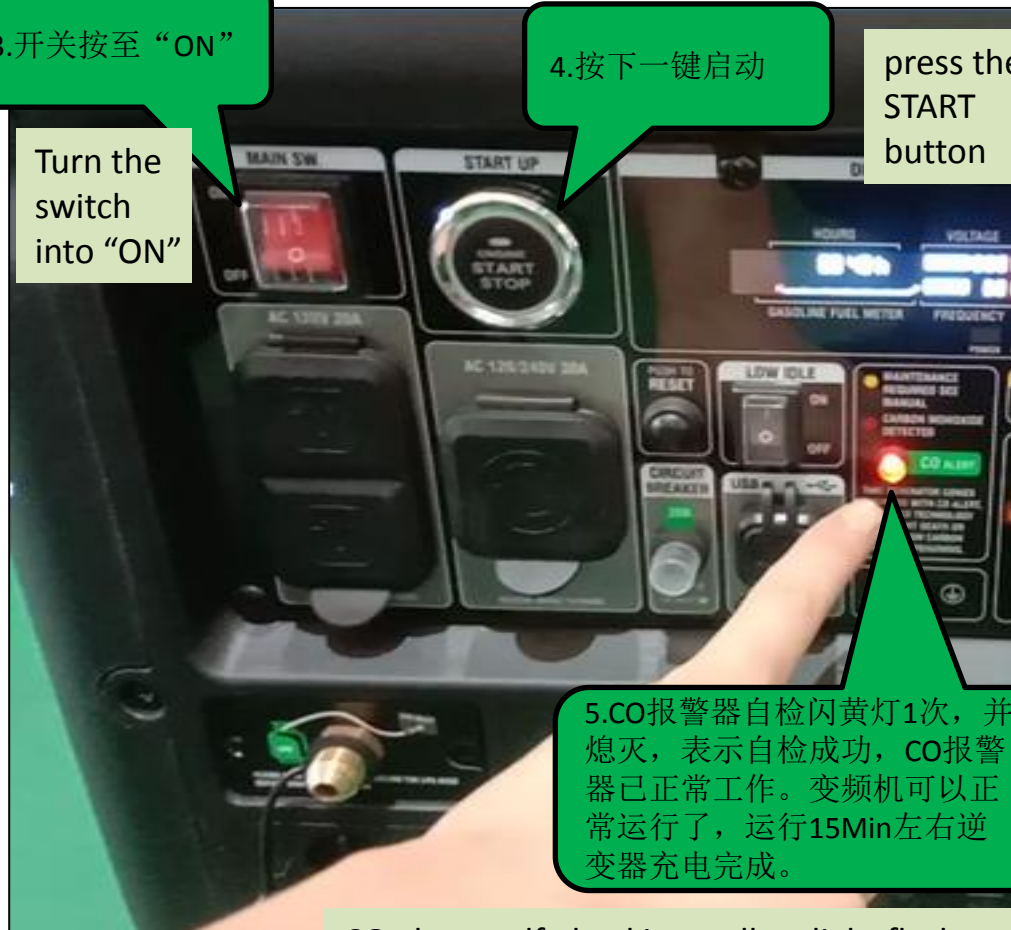

5. CO报警器自检闪黄灯1次，并  
熄灭，表示自检成功，CO报警  
器已正常工作。变频器可以正  
常运行了，运行15Min左右逆  
变器充电完成。

CO alarm self-checking yellow light flashes once, it shows self-checking works. CO alarm can works normally. Generator can work normally, and the generator battery is charged after running for about 15 minutes.

**Thank you !**