



# 零部件图册

PARTS CATALOG

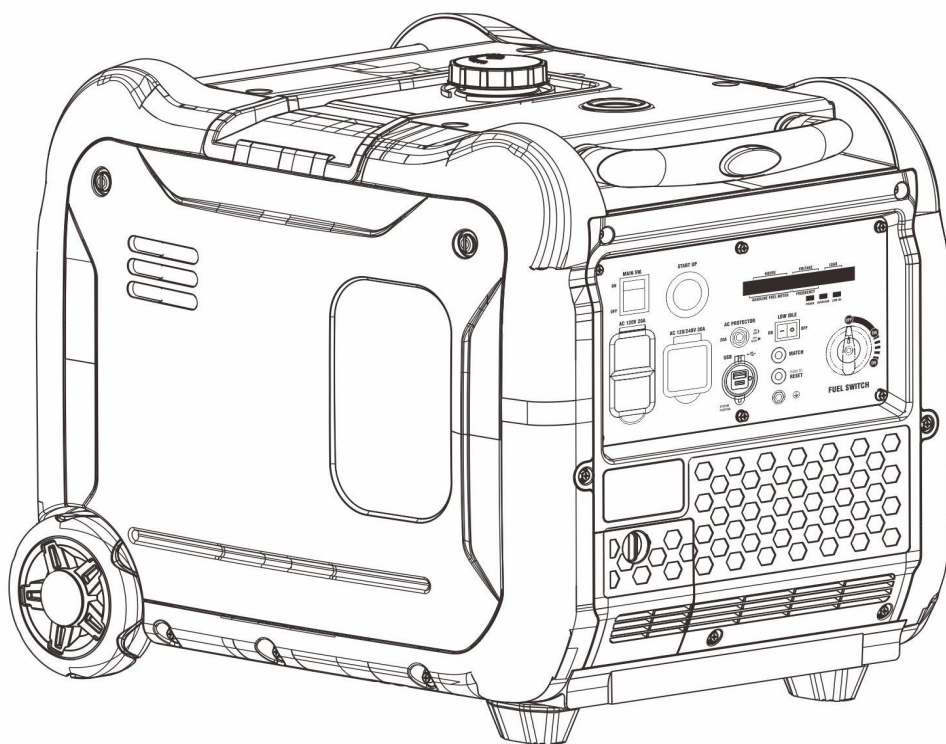

## GM6000iED


Inverter Generator

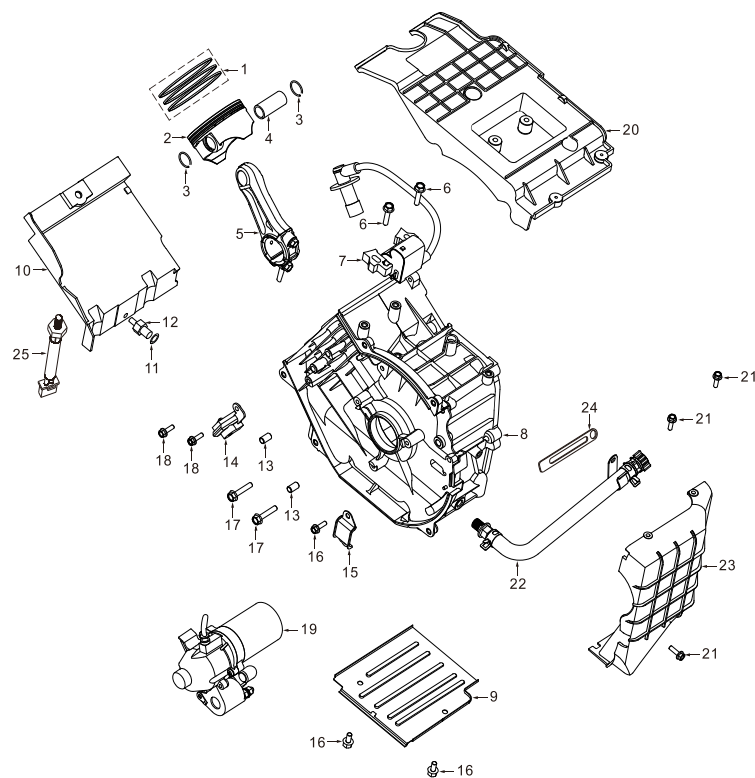

曲轴箱 (Crankcase)


| 序号  | 零部件图号               | 零部件名称    | Description             | 数量       |
|-----|---------------------|----------|-------------------------|----------|
| No. | Part No.            |          |                         | Quantity |
| 1   | 0210.180.X01V.00.00 | 活塞环组件    | Piston ring ass.        | 1        |
| 2   | 0200.F80.001V.00.00 | 活塞       | Piston                  | 1        |
| 3   | 0230.168.001V.00.00 | 活塞环卡圈    | Clip,Piston pin         | 2        |
| 4   | 0220.F80.001V.00.00 | 活塞销      | Piston pin              | 1        |
| 5   | 0190.F80.001V.00.00 | 连杆组件     | Connecting rod assembly | 1        |
| 6   | 5787.06025.00.01    | 螺栓 M6×25 | Blot                    | 2        |
| 7   | 2100.F80.001V.00.00 | 高压包      | High pressure bag       | 1        |
| 8   | 1000.F80.0011.00.00 | 曲轴箱体     | Crankcase body          | 1        |
| 9   | 3340.F80.001V.00.00 | 发动机底板    | Engine floor            | 1        |
| 10  | 6985.F80.0020.00.00 | 缸头罩      | Cylinder head cover     | 1        |

|    |                      |                                       |                            |   |
|----|----------------------|---------------------------------------|----------------------------|---|
| 11 | 1260.168.R001V.66.00 | 放油螺栓垫片 $\Phi 10$                      | Gasket for oil drain bolt  | 2 |
| 12 | 1250.F80.0011.00.20  | 放油螺栓 $M10 \times 1.25 \times 15$ --M6 | Oil drain bolt             | 2 |
| 13 | 3170.168.R001V.00.00 | 定位销-A型 $8 \times 14$                  | Set pin                    | 2 |
| 14 | 1521.F80.001V.00.00  | 触发器                                   | Trigger                    | 1 |
| 15 | 2090.F80.001V.00.00  | 压线板                                   | Crimping board             | 1 |
| 16 | 5787.06014.00.01     | 带盘螺栓 $M6 \times 14$                   | Blot                       | 3 |
| 17 | 5789.06028.00.01     | 带盘螺栓 $M6 \times 28$                   | Blot                       | 2 |
| 18 | 5789.05016.00.07     | 带盘螺栓 $M5 \times 16$                   | Blot                       | 2 |
| 19 | 2070.F80.A01V.00.00  | 起动电机                                  | Starting motor             | 1 |
| 20 | 8654.F80.0011.00.00  | 箱体罩                                   | Case cover                 | 1 |
| 21 | 5787.06018.00.01     | 带盘螺栓 $M6 \times 18$                   | Blot                       | 3 |
| 22 | 2330.F80.001V.00.00  | 放油管组合                                 | Oil drain pipe combination | 1 |
| 23 | 2783.F80.0020.00.00  | 启动电机罩                                 | Starting motor cover       | 1 |
| 24 | 1220.528.R0010.00.00 | 压线板                                   | Tension disc               | 1 |
| 25 | 1025.520.001V.00.00  | 温度传感器                                 | Temperature sensor         | 1 |

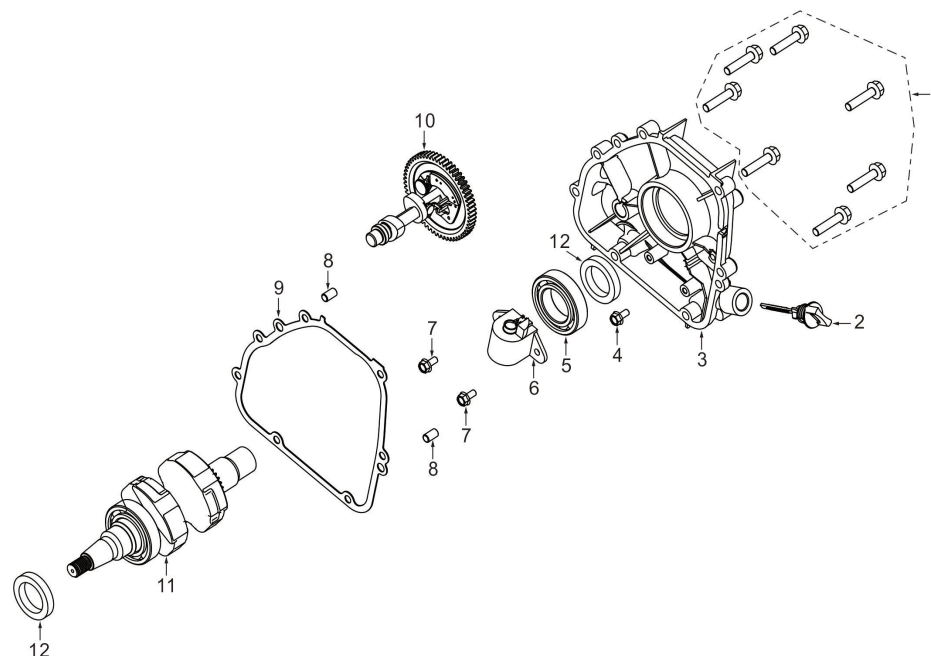


曲轴箱盖 (Crankcase cover)

| 序号  | 零部件图号                | 零部件名称       | Description      | 数量       |
|-----|----------------------|-------------|------------------|----------|
| No. | Part No.             |             |                  | Quantity |
| 1   | 5787.08035.00.01     | 带盘螺栓 M8×35  | Blot             | 7        |
| 2   | 1230.F80.001V.00.00  | 机油尺组件       | Oil gauge ass.   | 1        |
| 3   | 1010.F80.0031.00.00  | 曲轴箱盖        | Crankcase cover  | 1        |
| 4   | 5789.06010.00.01     | 带盘螺栓 M6×10  | Blot             | 1        |
| 5   | 0270.173.005V.00.00  | 轴承6206      | Ball bearing     | 1        |
| 6   | 1020.148.0011.00.00  | 机油报警器       | Warning device   | 1        |
| 7   | 5787.06014.00.01     | 带盘螺栓 M6×14  | Blot             | 2        |
| 8   | 3170.168.R001V.00.00 | 定位销-A型 8×14 | Set pin          | 2        |
| 9   | 3040.F80.0011.00.00  | 曲轴箱密封垫      | Gasket,Crankcase | 1        |
| 10  | 1040.F80.0010.60.00  | 凸轮轴         | Camshaft ass.    | 1        |
| 11  | 0180.F80.0030.61.00  | 曲轴组件        | Crankshaft ass.  | 1        |
| 12  | 3150.173.001V.00.00  | 油封 30×46×8  | Oil seal         | 2        |

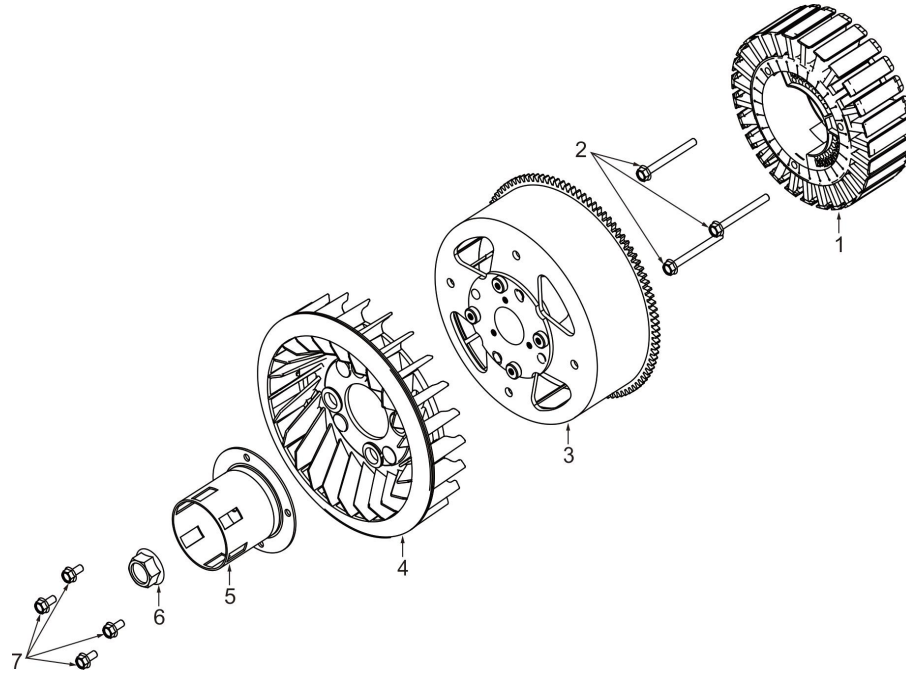

电机组件 (Motor assembly)


| 序号<br>No. | 零部件图号<br>Part No.   | 零部件名称        | Description     | 数量<br>Quantity |
|-----------|---------------------|--------------|-----------------|----------------|
| 1         | 4000.528.0030.00.02 | 电机定子         | Motor stator    | 1              |
| 2         | 5787.06065.00.01    | 带盘螺栓 M6×65   | Blot            | 3              |
| 3         | 4000.528.001V.00.01 | 电机转子         | Motor rotor     | 1              |
| 4         | 2030.528.0010.63.11 | 飞轮风扇         | Flywheel fan    | 1              |
| 5         | 2020.F80.002V.00.00 | 启动套          | Starting sleeve | 1              |
| 6         | 6177.14000.06.01    | 带盘螺母 M14×1.5 | Nut             | 1              |
| 7         | 5787.06014.00.01    | 带盘螺栓 M6×14   | Blot            | 4              |

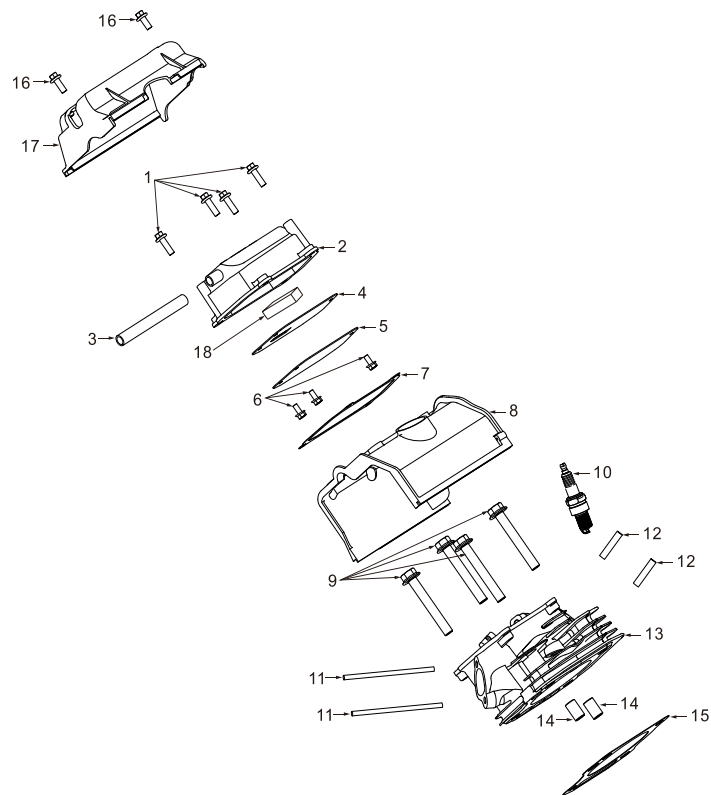

缸头组件 ( Cylinder head parts)


| 序号  | 零部件图号               | 零部件名称            | Description                    | 数量       |
|-----|---------------------|------------------|--------------------------------|----------|
| No. | Part No.            |                  |                                | Quantity |
| 1   | 5787.06025.00.01    | 带盘螺栓 M6×25       | Blot                           | 4        |
| 2   | 0001.F80.001V.00.01 | 缸头盖              | Cylinder head cover            | 1        |
| 3   | 2370.F80.001V.00.00 | 废气管              | Exhaust pipe                   | 1        |
| 4   | 7061.F80.001V.00.00 | 呼吸阀板组合           | Breathing valve plate assembly | 1        |
| 5   | 7061.F80.002V.00.00 | 呼吸阀垫             | Breathing valve pad            | 1        |
| 6   | 5789.05010.00.07    | 螺栓 M5×10         | Blot                           | 1        |
| 7   | 3000.F80.001V.00.00 | 缸头盖垫             | Cylinder head cover pad        | 1        |
| 8   | 2190.F80.0011.00.00 | 缸体导风罩            | Cylinder guide hood            | 1        |
| 9   | 5787.10075.05.10    | 带盘螺栓 M10×1.25×75 | Blot                           | 4        |
| 10  | 2160.168.008V.00.00 | 火花塞              | Spark plug                     | 1        |

|    |                     |              |                       |   |
|----|---------------------|--------------|-----------------------|---|
| 11 | 0900.06102.00.01    | 台阶双头螺栓 6×102 | Blot                  | 2 |
| 12 | R0900.08032.00.01   | 双头螺栓 8×32    | Blot                  | 2 |
| 13 | 0010.F80.001V.00.00 | 气缸头          | Cylinder head         | 1 |
| 14 | 3170.188.002V.00.00 | 定位销 12×20    | Set pin               | 2 |
| 15 | 3020.F80.0020.00.00 | 缸头垫          | Gasket, Cylinder head | 1 |
| 16 | 5787.06018.00.01    | 带盘螺栓 M6×18   | Blot                  | 2 |
| 17 | 2781.F80.0010.00.00 | 缸头盖罩         | Cylinder head cover   | 1 |
| 18 | 7080.165.001V.00.00 | 燃油滤网         | Fuel filter           | 1 |

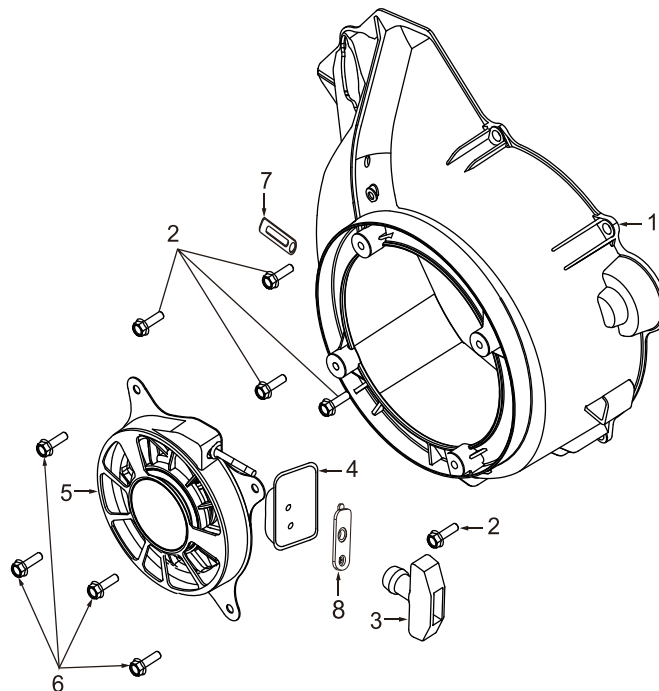


单机起动器 (Engine Starter)

| 序号<br>No. | 零部件图号<br>Part No.    | 零部件名称      | Description            | 数量<br>Quantity |
|-----------|----------------------|------------|------------------------|----------------|
| 1         | 2000.F80.0011.00.01  | 起动大罩       | Starting hood          | 1              |
| 2         | 5787.06018.00.01     | 带盘螺栓 M6×18 | Blot                   | 5              |
| 3         | 2000.T70.001V.04.03  | 起动手柄       | Starting handle        | 1              |
| 4         | 2186.T48.001V.00.00  | 拉手盖板       | Handle cover           | 1              |
| 5         | 2000.T70.0020.00.02  | 拉盘         | Pull the plate         | 1              |
| 6         | 5787.06014.00.01     | 带盘螺栓 M6×14 | Blot                   | 4              |
| 7         | 1220.528.R0020.00.00 | 压线板        | Tension disc           | 1              |
| 8         | 7495.528.0020.00.00  | 拉索装饰盖板     | Cable trim cover plate | 1              |

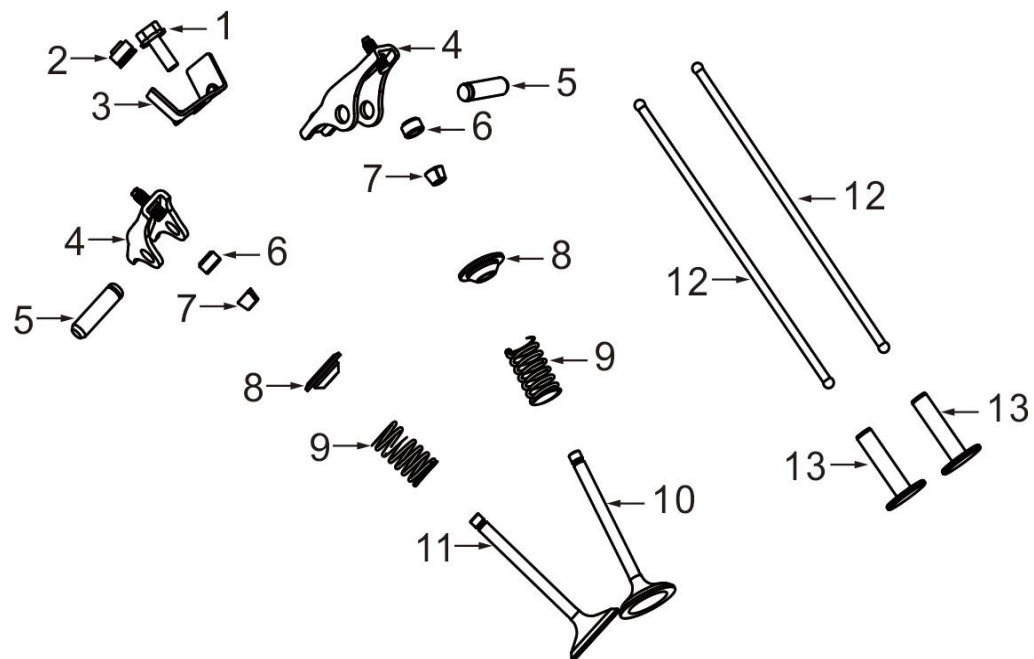


配气 (Air distribution)

| 序号<br>No. | 零部件图号<br>Part No.   | 零部件名称      | Description            | 数量<br>Quantity |
|-----------|---------------------|------------|------------------------|----------------|
| 1         | 5787.06014.00.01    | 带盘螺栓 M6×14 | Blot                   | 1              |
| 2         | 0085.165.001V.00.00 | 挡油罩        | Oil seal, Intake valve | 1              |
| 3         | 0107.F70.020V.00.00 | 摇臂轴挡块      | Rocker shaft stop      | 1              |
| 4         | 0100.F80.001V.00.00 | 摇臂         | Rocker ass.            | 2              |
| 5         | 0105.K92.001V.00.00 | 摇臂轴        | Rocker shaft           | 2              |
| 6         | 0090.168.001V.00.00 | 气门顶帽       | Valve top cap          | 2              |
| 7         | 1120.165.0020.00.00 | 气门锁夹       | Valve collet           | 2              |
| 8         | 0060.165.0020.00.00 | 气门弹簧座      | Valve spring seat      | 2              |
| 9         | 0040.F80.001V.00.00 | 气门弹簧       | Valve spring           | 2              |
| 10        | 0030.F80.001V.00.00 | 排气门        | Exhaust valve          | 1              |
| 11        | 0020.F80.001V.00.00 | 进气门        | Intake valve           | 1              |
| 12        | 0160.F80.001V.00.00 | 推杆         | Pusher                 | 2              |
| 13        | 1030.F68.001V.00.00 | 挺柱         | Tappet                 | 2              |

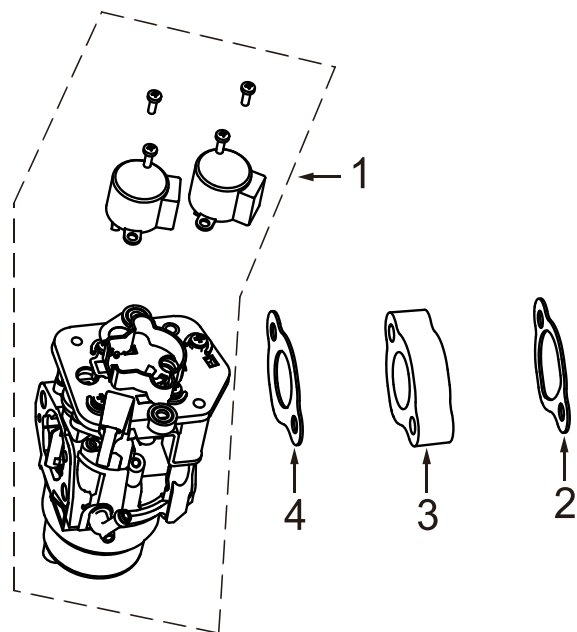


化油器部件 (Carburetor parts)

| 序号  | 零部件图号               | 零部件名称 | Description        | 数量       |
|-----|---------------------|-------|--------------------|----------|
| No. | Part No.            |       |                    | Quantity |
| 1   | 2260.F80.0040.00.00 | 化油器组件 | Carburetor ass.    | 1        |
| 2   | 3060.F80.001V.00.00 | 进气口垫片 | Gasket, inlet port | 1        |
| 3   | 2300.F80.001V.00.00 | 化油器接块 | Carburetor block   | 1        |
| 4   | 3080.F80.001V.00.00 | 化油器垫片 | Gasket, carburetor | 1        |

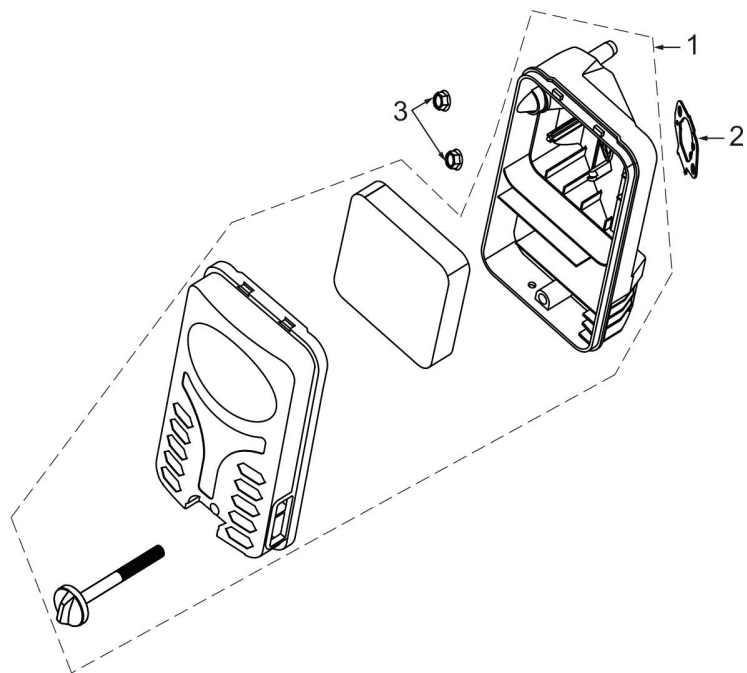


空滤器 (Air cleaner)

| 序号  | 零部件图号               | 零部件名称     | Description          | 数量       |
|-----|---------------------|-----------|----------------------|----------|
| No. | Part No.            |           |                      | Quantity |
| 1   | 2280.F80.0020.00.00 | 空滤器组件     | Air cleaner ass.     | 1        |
| 2   | 3095.168.001V.00.00 | 空滤器纸垫     | Air filter paper pad | 1        |
| 3   | 6177.06000.00.01    | 带盘防松螺母 M6 | Nut                  | 2        |

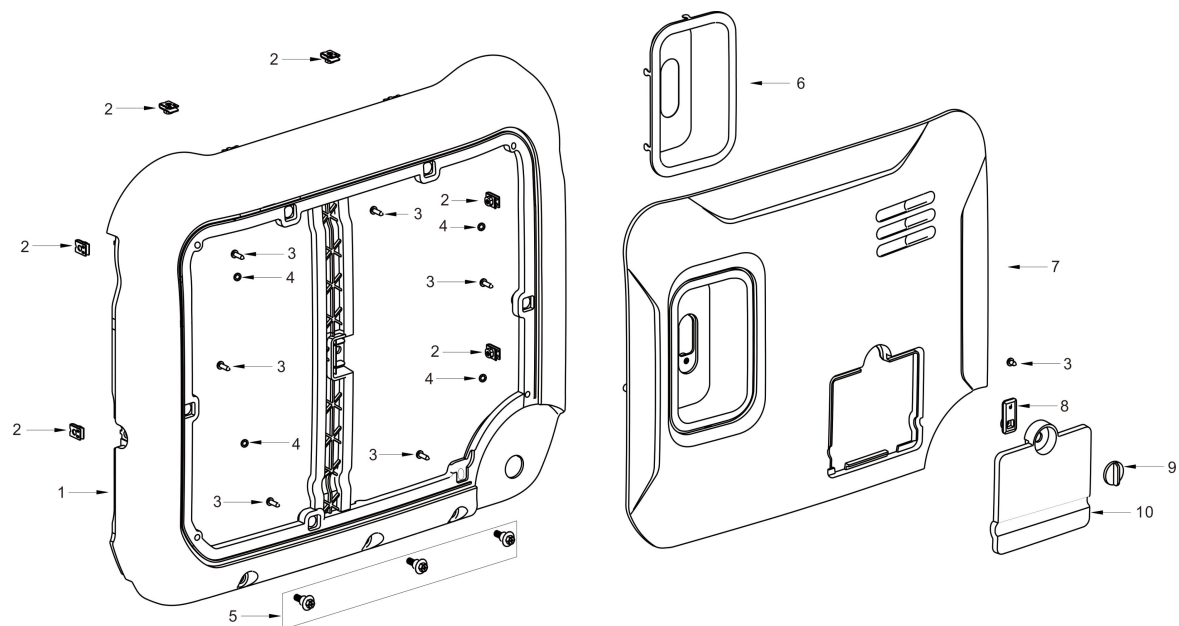


右外壳 (Right housing)

| 序号<br>No. | 零部件图号<br>Part No.   | 零部件名称        | Description                               | 数量<br>Quantity |
|-----------|---------------------|--------------|-------------------------------------------|----------------|
| 1         | 2222.528.001V.00.00 | 右外壳          | Right shell                               | 1              |
| 2         | 6178.05000.01.04    | 夹片螺母 M5      | Nut                                       | 6              |
| 3         | 0845.42013.00.01    | 自攻螺钉 M4.2×13 | Self tapping screw                        | 7              |
| 4         | 5598.467.001V.00.00 | 梅花孔挡圈        | Plum blossom hole retaining ring          | 4              |
| 5         | 4789.467.001V.00.00 | 台阶螺栓 M6×16.5 | Bolt                                      | 3              |
| 6         | 7495.528.001V.00.00 | 起动手柄装饰盖      | Decorative cover of starting handle       | 1              |
| 7         | 5596.528.0010.P4.00 | 右侧外观盖板       | Right appearance cover                    | 1              |
| 8         | 6542.528.001V.00.00 | 限位挡块         | Limit stop                                | 1              |
| 9         | 6378.528.001V.00.00 | 护门旋钮         | Door knob                                 | 1              |
| 10        | 1142.528.0010.P4.00 | 加放机油维护门      | Oil filling and draining maintenance door | 1              |

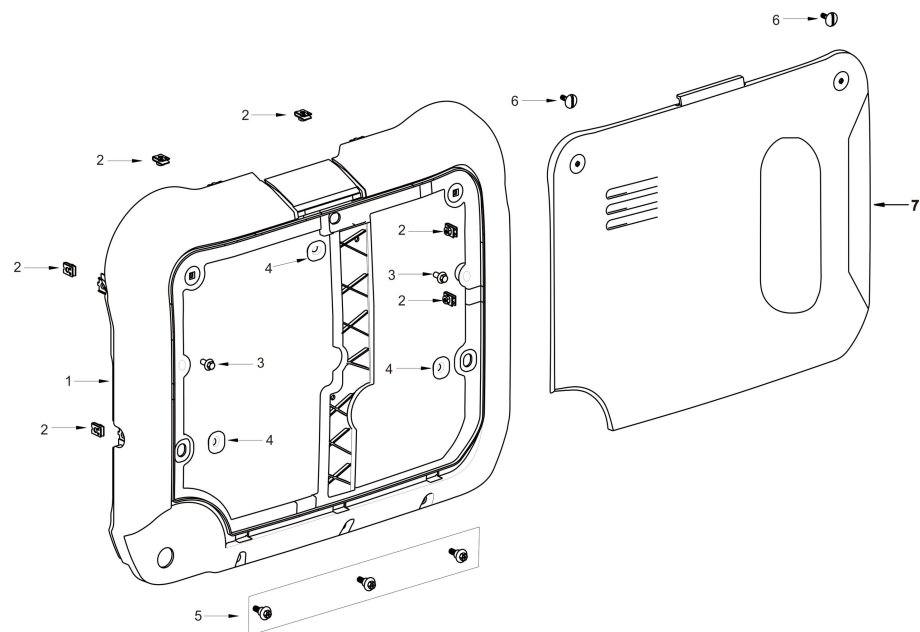


左外壳 (Left housing)

| 序号<br>No. | 零部件图号<br>Part No.   | 零部件名称          | Description                      | 数量<br>Quantity |
|-----------|---------------------|----------------|----------------------------------|----------------|
| 1         | 2220.528.001V.00.00 | 左外壳            | Left housing                     | 1              |
| 2         | 6178.05000.01.04    | 夹片螺母 M5        | Nut                              | 6              |
| 3         | 5787.06012.00.01    | 带盘螺栓 M6×12     | Bolt                             | 2              |
| 4         | 5522.467.002V.00.00 | 油箱支撑胶套B        | Oil tank support rubber sleeve B | 3              |
| 5         | 4789.467.001V.00.00 | 台阶螺栓 M6×16.5   | Bolt                             | 3              |
| 6         | 5424.528.001V.00.00 | 一字槽半圆头螺钉 M5×16 | Slotted half round head screw    | 2              |
| 7         | 5596.528.0020.P4.00 | 左侧外观盖板         | Left appearance cover            | 1              |

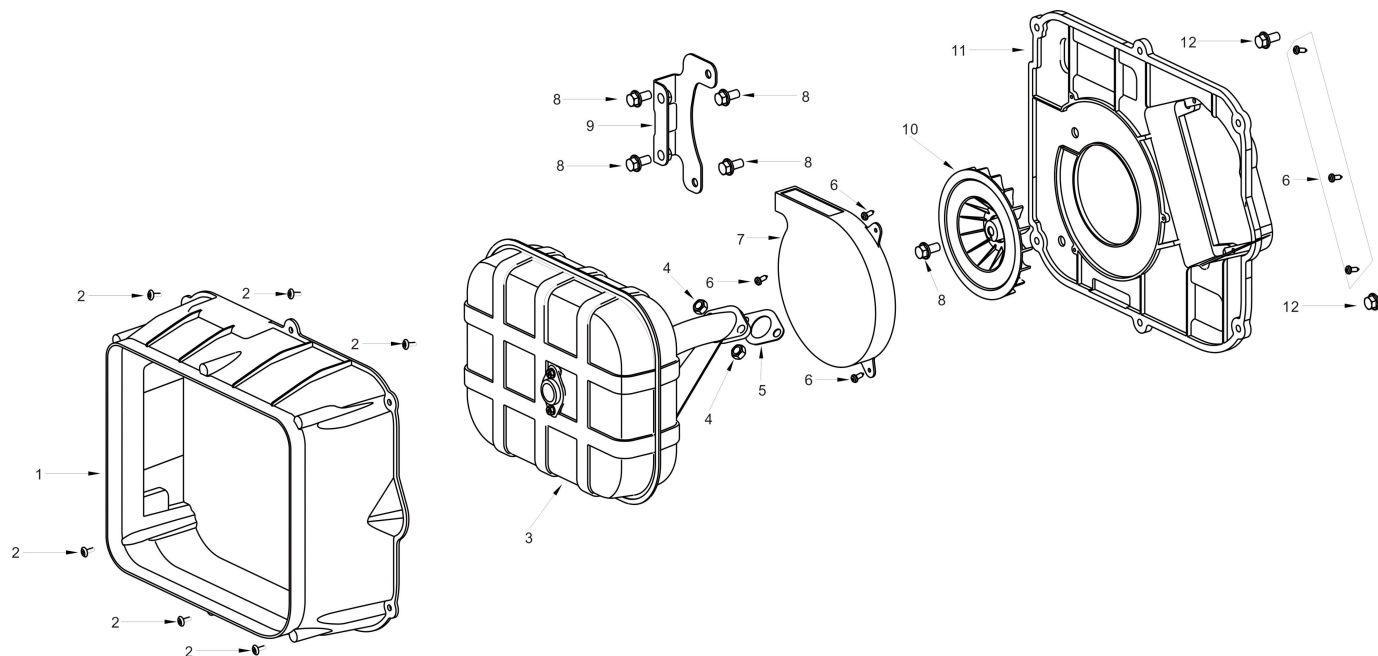

消声器 (Muffler parts)


| 序号  | 零部件图号               | 零部件名称        | Description                   | 数量       |
|-----|---------------------|--------------|-------------------------------|----------|
| No. | Part No.            |              |                               | Quantity |
| 1   | 2402.528.001V.00.00 | 消声器外罩        | Muffler cover                 | 1        |
| 2   | 5787.05016.00.01    | 带盘螺栓 M5×16   | Bolt                          | 6        |
| 3   | 2400.528.001V.00.00 | 消声器组件        | Muffler assembly              | 1        |
| 4   | 6170.08000.00.01    | 六角螺母 M8      | Hexagon nut                   | 2        |
| 5   | 3100.188.004V.00.00 | 消声器密封垫       | Muffler gasket                | 1        |
| 6   | 0845.42013.00.07    | 自攻螺钉 M4.2×13 | Self tapping screw            | 6        |
| 7   | 2030.528.0011.63.12 | 风扇罩          | Fan hood                      | 1        |
| 8   | 5787.08016.00.01    | 带盘螺栓 M8×16   | Bolt                          | 5        |
| 9   | 1689.528.001V.00.00 | 消声器安装支架      | Muffler mounting bracket      | 1        |
| 10  | 2030.F80.001V.00.00 | 风扇           | Fan                           | 1        |
| 11  | 9757.528.001V.00.00 | 消声器外罩隔板      | The muffler housing clapboard | 1        |
| 12  | 5787.06016.00.01    | 带盘螺栓 M6×16   | Bolt                          | 2        |

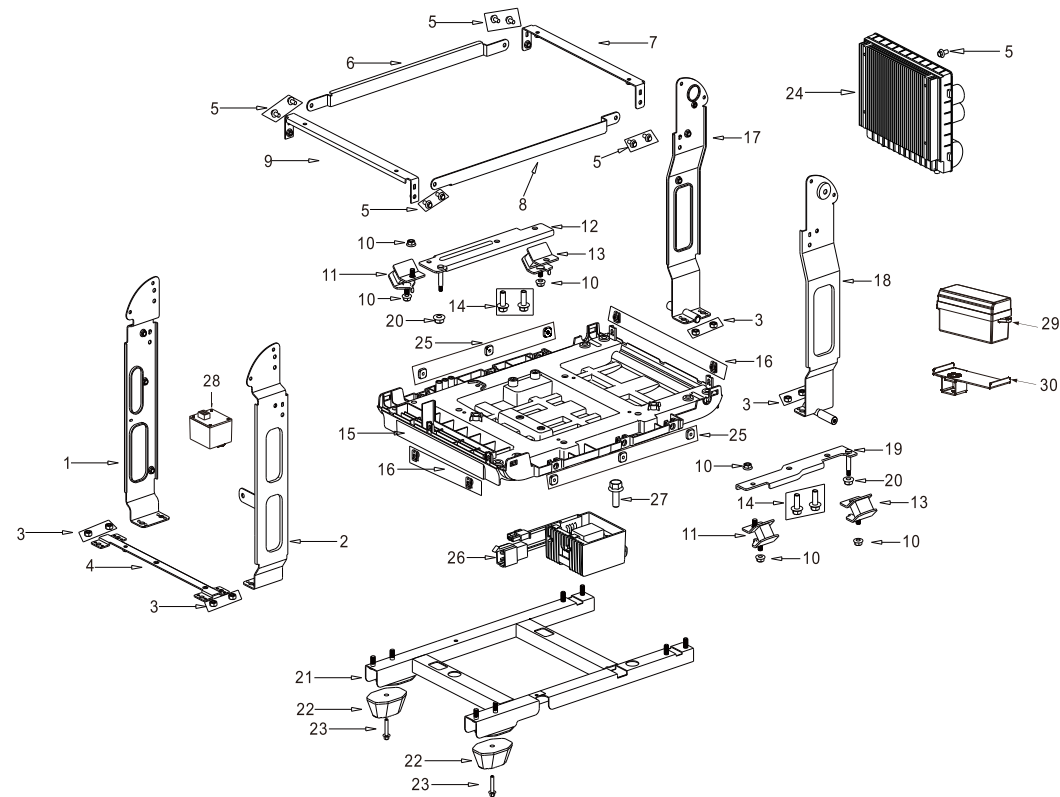

机架 (Frame)


| 序号  | 零部件图号               | 零部件名称      | Description             | 数量       |
|-----|---------------------|------------|-------------------------|----------|
| No. | Part No.            |            |                         | Quantity |
| 1   | 4863.528.0011.00.00 | 左支架1       | Left bracket 1          | 1        |
| 2   | 4863.528.0052.00.00 | 右支架1       | Right bracket 1         | 1        |
| 3   | 6170.08000.00.07    | 六角螺母 M8    | Nut                     | 8        |
| 4   | 9727.528.001V.00.00 | 前横杆        | Front cross bar         | 1        |
| 5   | 5787.06012.00.01    | 带盘螺栓 M6×12 | Bolt                    | 9        |
| 6   | 2999.528.001V.00.00 | 左横档        | Left rail               | 1        |
| 7   | 7174.528.002V.00.00 | 油箱后支架      | Fuel tank rear bracket  | 1        |
| 8   | 2999.528.002V.00.00 | 右横档        | Right rail              | 1        |
| 9   | 7174.528.001V.00.00 | 油箱前支架      | Fuel tank front bracket | 1        |

|    |                     |                |                              |   |
|----|---------------------|----------------|------------------------------|---|
| 10 | 6177.08000.00.01    | 带盘螺母 M8        | Nut                          | 6 |
| 11 | 3360.487.001V.00.00 | 减震垫1（高30）      | Damping pad 1                | 2 |
| 12 | 3340.528.001V.00.00 | 动力固定底板1        | Power fixed base plate 1     | 1 |
| 13 | 3360.528.001V.00.00 | 减震垫1（斜45°）     | Damping pad 1                | 2 |
| 14 | 5787.10025.05.01    | 带盘螺栓 M10×25    | Bolt                         | 4 |
| 15 | 3340.528.0031.00.00 | 底板             | Floor                        | 1 |
| 16 | 6178.05000.01.04    | 夹片螺母 M5        | Clip nut                     | 4 |
| 17 | 4863.528.002V.00.00 | 左支架2           | Left bracket 2               | 1 |
| 18 | 4863.528.004V.00.00 | 右支架2           | Right bracket 2              | 1 |
| 19 | 3340.528.002V.00.00 | 动力固定底板2        | Power fixed base plate 2     | 1 |
| 20 | 6177.06000.00.01    | 带盘螺母 M6        | Nut                          | 2 |
| 21 | 6353.528.0011.00.00 | 机架底支架          | Frame bottom bracket         | 1 |
| 22 | 3350.528.001V.00.00 | 减震座 80×53×33.5 | Shock absorber seat          | 2 |
| 23 | 5787.06025.00.01    | 带盘螺栓 M6×25     | Bolt                         | 2 |
| 24 | 2470.528.0100.00.00 | 逆变器            | Inverter                     | 1 |
| 25 | 5926.467.001V.00.00 | 方螺母 M6         | Square nut                   | 6 |
| 26 | 6854.528.0021.00.00 | 调压整流器          | Voltage regulating rectifier | 1 |
| 27 | 5787.06016.00.01    | 带盘螺栓 M6×16     | Bolt                         | 1 |
| 28 | 5528.000.0050.00.00 | CO报警器          | CO alarm                     | 1 |
| 29 | 2461.J05.0010.00.00 | 电池             | Battery                      | 1 |
| 30 | 3331.J05.0010.00.01 | 电池盒            | Cell box                     | 1 |

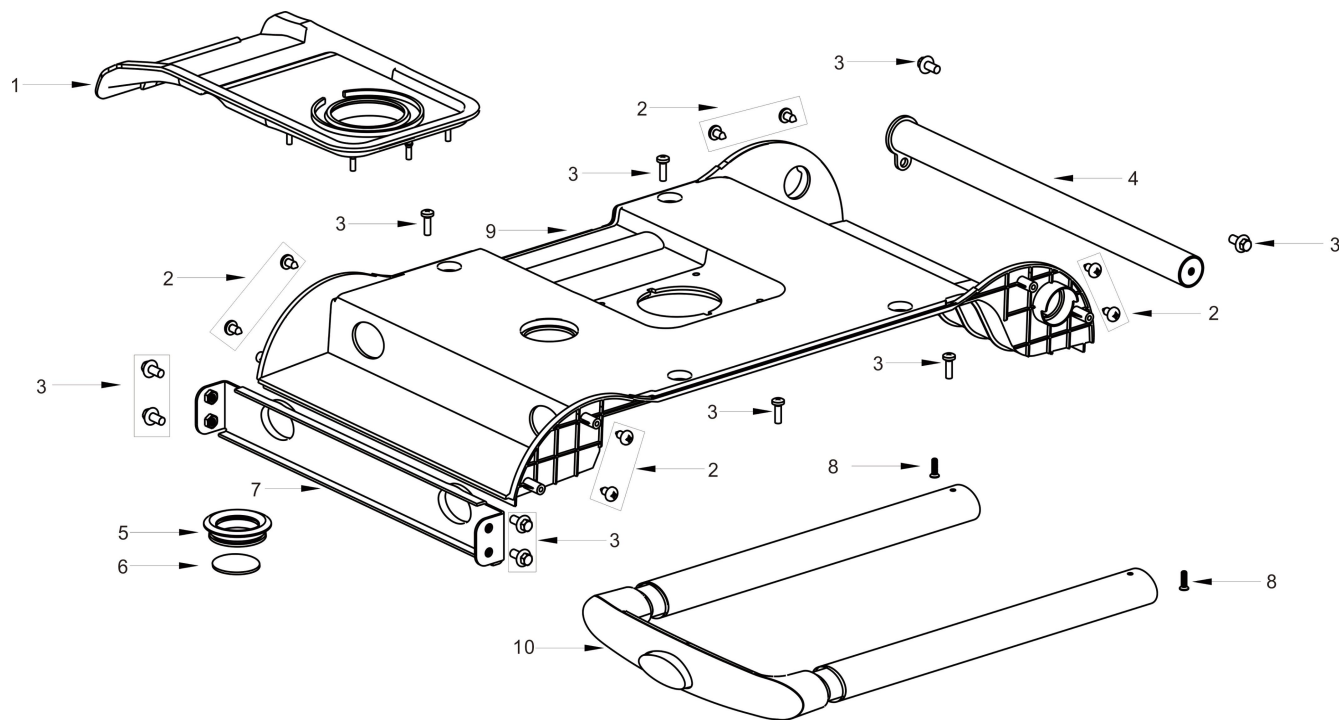


拉杆外壳 (Pull rod/Housing)

| 序号  | 零部件图号               | 零部件名称         | Description                       | 数量       |
|-----|---------------------|---------------|-----------------------------------|----------|
| No. | Part No.            |               |                                   | Quantity |
| 1   | 3200.528.001V.00.03 | 注油口胶套         | Rubber sleeve of oil filling port | 1        |
| 2   | 0845.42016.00.07    | 自攻螺钉 M4.2×16  | Self tapping screw                | 8        |
| 3   | 5787.06012.00.01    | 带盘螺栓 M6×12    | Bolt                              | 10       |
| 4   | 3330.528.0010.00.00 | 扶手            | Handrail                          | 1        |
| 5   | 9988.528.001V.00.00 | 油位窗胶套         | Oil level window rubber sleeve    | 1        |
| 6   | 8787.528.001V.00.00 | 油位窗玻璃         | Oil level window glass            | 1        |
| 7   | 9577.528.001V.00.00 | 抽拉把手支撑架       | Pull handle support frame         | 1        |
| 8   | 0845.35095.00.07    | 自攻螺钉 M3.5×9.5 | Self tapping screw                | 2        |
| 9   | 9674.528.001V.00.00 | 上外壳           | Upper shell                       | 1        |
| 10  | 9874.528.0040.00.00 | 抽拉把手组件        | Pull handle assembly              | 1        |

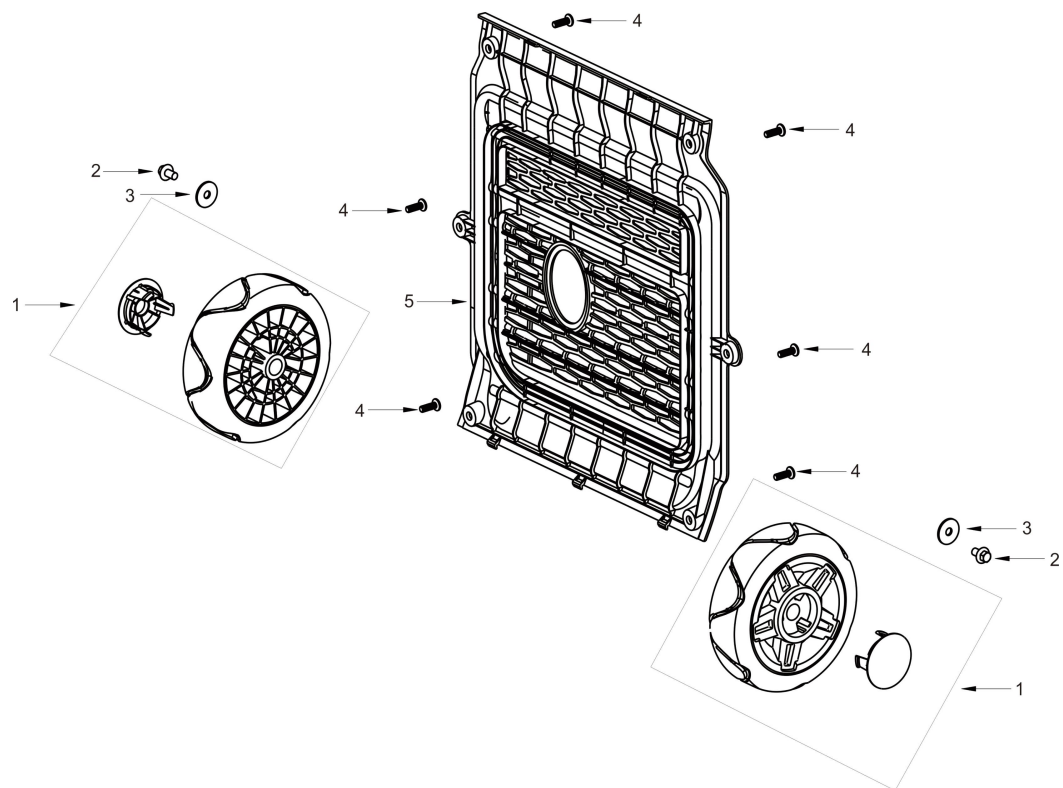


尾罩 (Tail cover)

| 序号  | 零部件图号                | 零部件名称           | Description                | 数量       |
|-----|----------------------|-----------------|----------------------------|----------|
| No. | Part No.             |                 |                            | Quantity |
| 1   | 7390.528.001V.00.00  | 前轮              | Front wheel                | 2        |
| 2   | 5787.06012.00.01     | 带盘螺栓 M6×12      | Bolt                       | 2        |
| 3   | 4100.460.R001V.20.00 | 非标平垫 Φ6×Φ25×1.5 | Non standard flat pad      | 2        |
| 4   | 0818.05016.00.07     | 十字大盘头螺钉 5×6     | Cross large pan head screw | 6        |
| 5   | 2435.528.0011.00.00  | 消声器边罩           | Muffler side cover         | 1        |

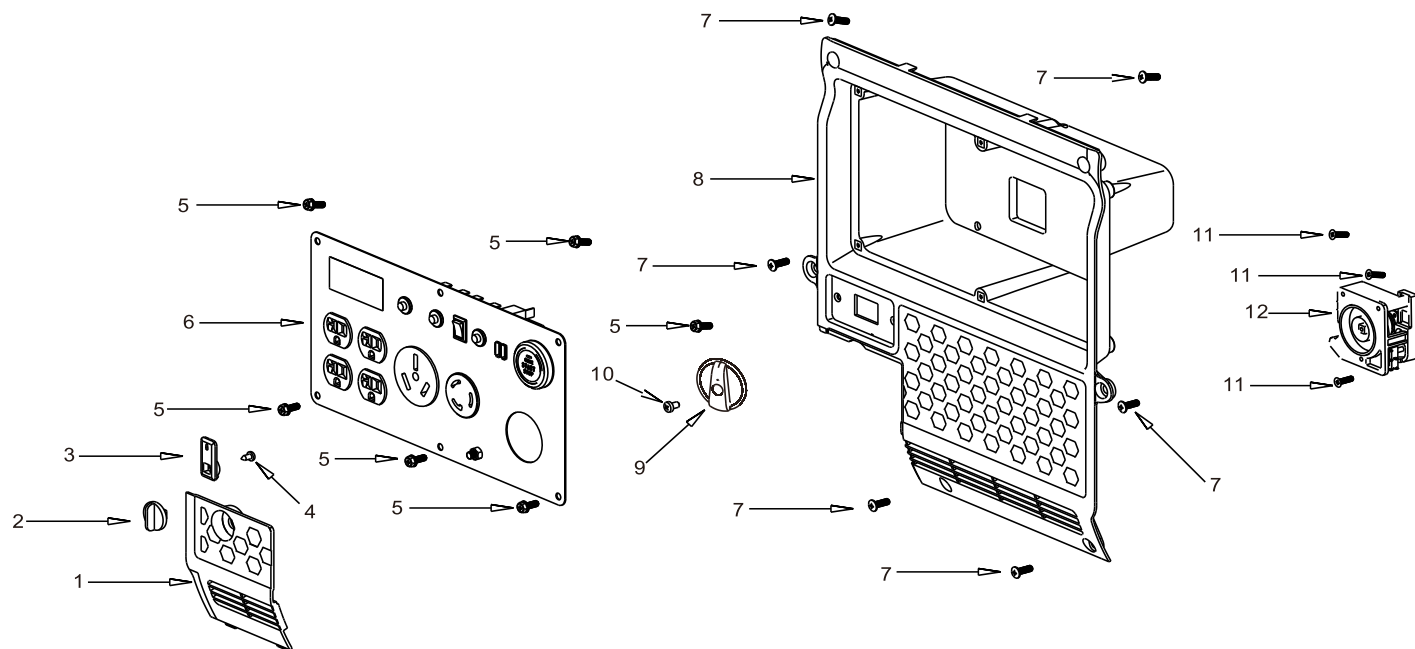

面板 (Panel)

| 序号<br>No. | 零部件图号<br>Part No.   | 零部件名称           | Description                | 数量<br>Quantity |
|-----------|---------------------|-----------------|----------------------------|----------------|
| 1         | 8748.528.001V.00.00 | 电瓶护门            | Battery door               | 1              |
| 2         | 6378.528.001V.00.00 | 护门旋钮            | Knob                       | 1              |
| 3         | 6542.528.001V.00.00 | 限位挡块            | Stop block                 | 1              |
| 4         | 0845.42010.00.07    | 自攻螺钉 M4.2×10    | Self tapping screw         | 1              |
| 5         | 0818.05010.00.07    | 十字盘头螺钉 5×10     | Cross pan head screw       | 6              |
| 6         | 3370.528.0610.00.99 | 控制面板组合          | Control panel combination  | 1              |
| 7         | 0818.05016.00.07    | 十字大盘头螺钉 5×16    | Cross large pan head screw | 6              |
| 8         | 6655.528.0011.00.00 | 面板座             | Panel seat                 | 1              |
| 9         | 2140.473.0011.00.00 | 油气转换开关          | Oil-gas switch             | 1              |
| 10        | 0818.04014.00.01    | 十字盘头螺钉 4×14     | Cross pan head screw       | 1              |
| 11        | 0819.04212.00.01    | 十字沉头自攻螺钉 4.2×12 | Self tapping screw         | 3              |
| 12        | 2140.473.0011.00.03 | 油气转换开关甩块        | Oil gas switch swing block | 1              |

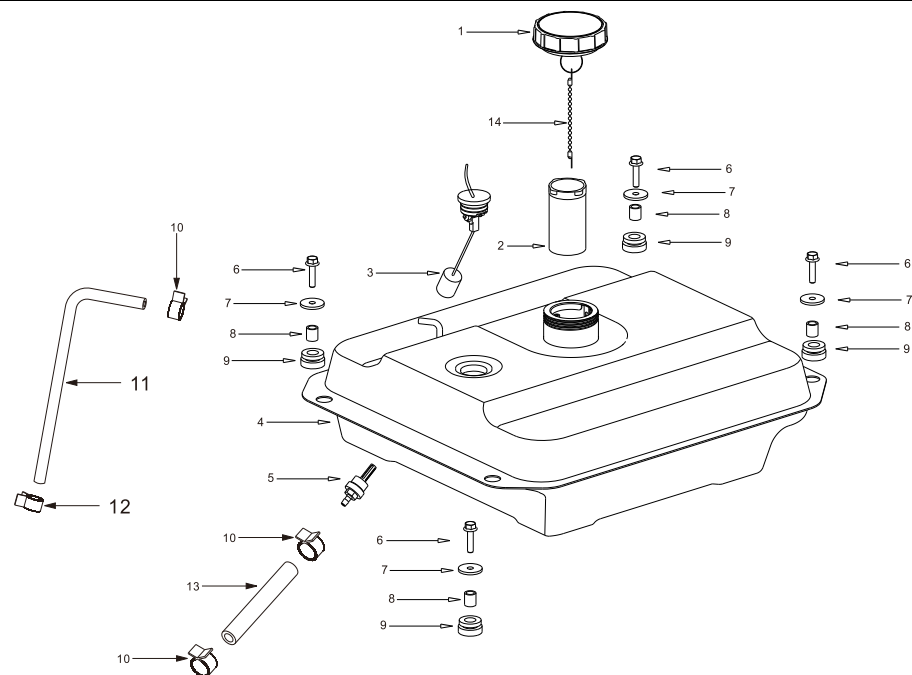

燃油箱部件 (Fuel tank components)

| 序号  | 零部件图号                | 零部件名称               | Description                          | 数量       |
|-----|----------------------|---------------------|--------------------------------------|----------|
| No. | Part No.             |                     |                                      | Quantity |
| 1   | 3200.487.C01V.04.01  | 油箱盖                 | Fuel tank cap                        | 1        |
| 2   | 3200.168.075V.00.05  | 燃油滤网                | Fuel filter screen                   | 1        |
| 3   | 3200.528.0010.00.06  | 圆形电子油标              | Circular electronic oil mark         | 1        |
| 4   | 3200.528.001V.00.00  | 油箱                  | Tank                                 | 1        |
| 5   | 3206.168.R001V.00.00 | 油箱出油嘴               | Fuel tank outlet nozzle              | 1        |
| 6   | 5787.06025.00.01     | 带盘螺栓 M6×25          | Bolt                                 | 4        |
| 7   | 4100.460.R001V.20.00 | 非标平垫 Φ6×Φ25×1.5     | Non standard flat pad                | 4        |
| 8   | 3213.460.001V.00.00  | 油箱衬套 Φ8.6×Φ12×Φ12.2 | Tank bushing                         | 4        |
| 9   | 3217.460.001V.00.00  | 油箱安装胶套              | Oil tank mounting rubber sleeve      | 4        |
| 10  | 2360.458.R002V.00.00 | 带形油管夹 Φ8.5          | Ferrule                              | 3        |
| 11  | 2330.528.C060.00.00  | 燃油蒸发收集管             | Fuel oil evaporation collection pipe | 1        |
| 12  | 2360.458.R004V.00.00 | 带形油管夹 Φ10           | Ferrule                              | 1        |
| 13  | 2330.528.C050.00.22  | 油管                  | Oil tube                             | 1        |
| 14  | 3200.487.004V.00.02  | 油箱盖链条               | Tank cover chain                     | 1        |